

# LED DRIVING LIGHT | Part no. L133.514

## INSTALLATION INSTRUCTIONS

### Preliminary Steps

1. Read all instructions carefully and study diagrams before installing lights.
2. Check with state and local authorities for laws governing usage and proper mounting of auxiliary lamps.
3. Disconnect ground connection from battery (marked "-") to avoid accidental short circuits before attempting to connect electrical wires.
4. Route new wires along existing wiring . Tape as necessary to correct slack.
5. When running wires through the firewall, keep them away from moving parts.

### Wiring:


Black:Ground "-", Red:Driving light "+", Yellow:Warning light "+", Green:Signal line "+", Gray:Park light "+"

#### 1. Frequency Switching:

After the signal line(Green) is powered on, it will automatically switch to different flashing modes, which has three flashing modes totally.

#### 2. Frequency Synchronization of Multi-lights Installation :

Switch the frequency of each light to the same flashing mode, and then connect the signal lines(Green) of each light in series. At this time, each light will flash at the same frequency.

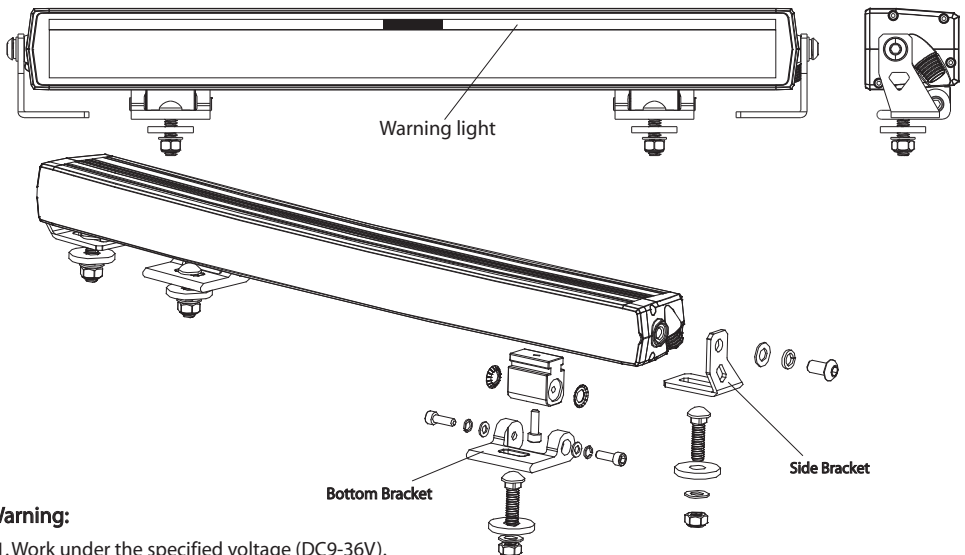

### Warning:

1. Work under the specified voltage (DC9-36V).
2. This light becomes hot under continuous use. Don't remove or touch the casing for at least 30 minutes after turning the lamp off.
3. Keep heat-sink clean and exposed to maintain air flow.

L133.514