



# PRV203 – FRONT BAR MOUNTING INSTRUCTION

1. Open foothold on front grill. There will be total 3 rivets on foothold. 2 is top of edge and the other one is middle of bottom. Removed that 3 rivets and assemble our legs there. (Pic. 1)
2. Then place the front bar to the truck and tighten the bolts.(Pic. 2)

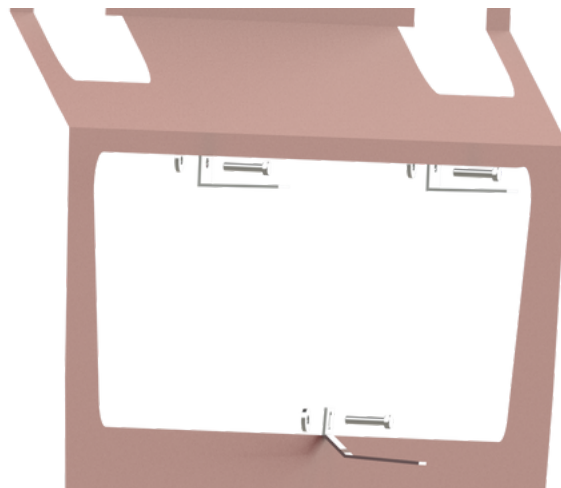

Pic. 1

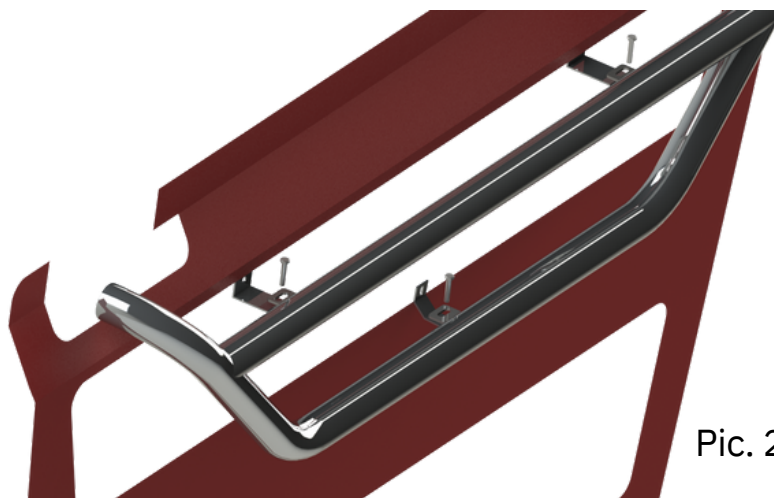

Pic. 2