


PRV206 – 3 PCS BUMPER BAR FH4 MOUNTING INSTRUCTION

- 1.** There will be 2 bolts in Chassis. Remove them from Chassis and place the middle part of bar and tighten the bolts. (Pic. 1)
- 2.** For side piece bars front mount, remove the bolts from near of front piece bar and assemble the bar. (Pic. 2)
- 3.** Take the small part in box and assemble it to the under of step and place edge of welded legs to under step part and tighten the bolts. (Pic. 3)

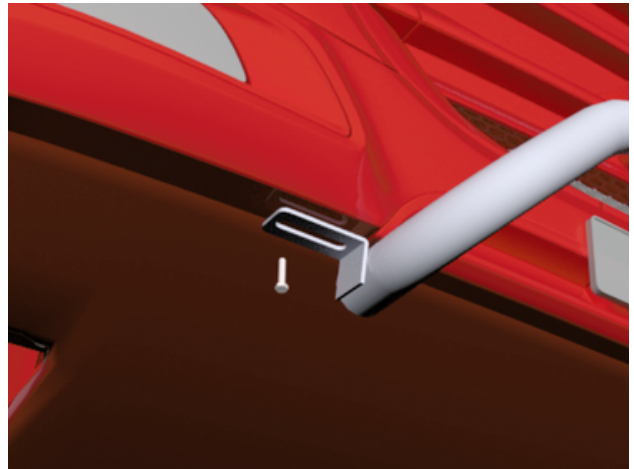

pic 1




pic 1



pic 2



pic 3

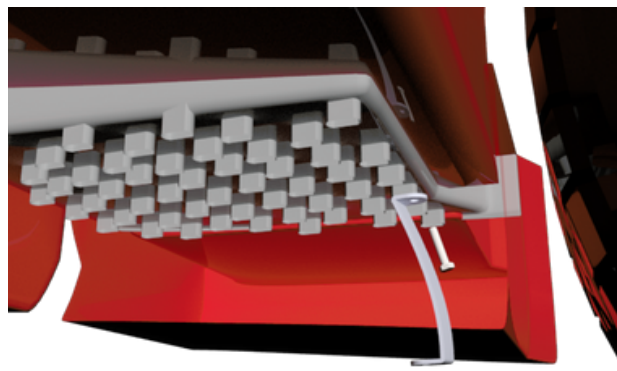

pic 3