

Fendt 7

Mounting instructions Art. 887300 Lamp holder



Scan the QR code for translated instructions or visit metec.ee/instructions



Weight: 17,7 kg

Time of mounting w/o wiring: 60 min


Required tools:







A2 / A4 M8 - 17 Nm M10 - 33 Nm

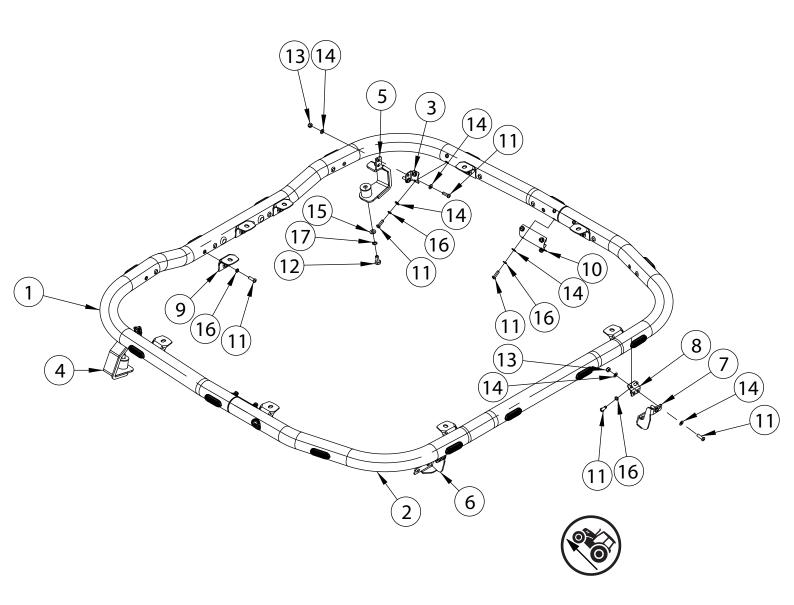

Pos	Description	QTY
1.	Arc	1
2.	Arc	1
3.	Bolt bracket	2
4.	Bracket	1
5.	Bracket	1
6.	Bracket	1
7.	Bracket	1
8.	Bolt bracket	2
9.	Lamp fixing bracket	9
10.	Pipe clamp	2

Pos	Description	QTY
11.	Bolt M8x25 DIN7380-A2	33
12.	Bolt M10x25 DIN933-A2	2
13.	Nut M8 DIN985-A2	8
14.	Flat washer 8,4x16x1,6	28
15.	Flat washer 10,5x20x2	2
16.	Spring washer A8	25
17.	Spring washer A10	2

Art. 887300 Lamp holder


NB!




To prevent cold welding, use cold weld grease or engine oil




Installation of the lights must be carried out by a qualified electrician only

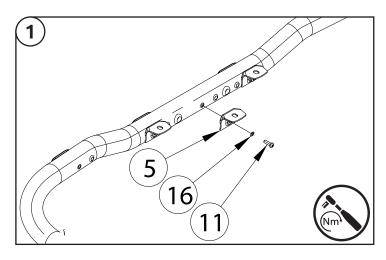


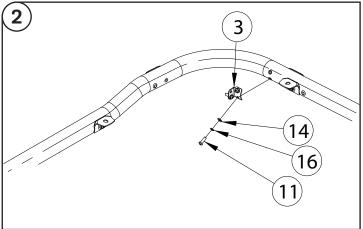




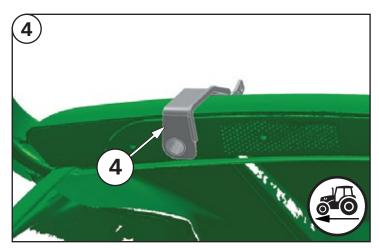




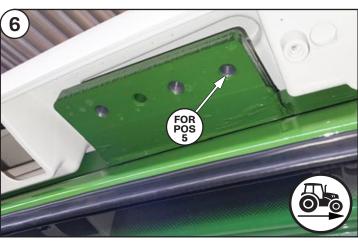

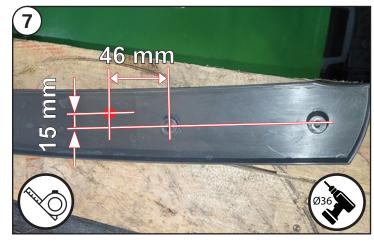

Fendt 7
Art. 887300

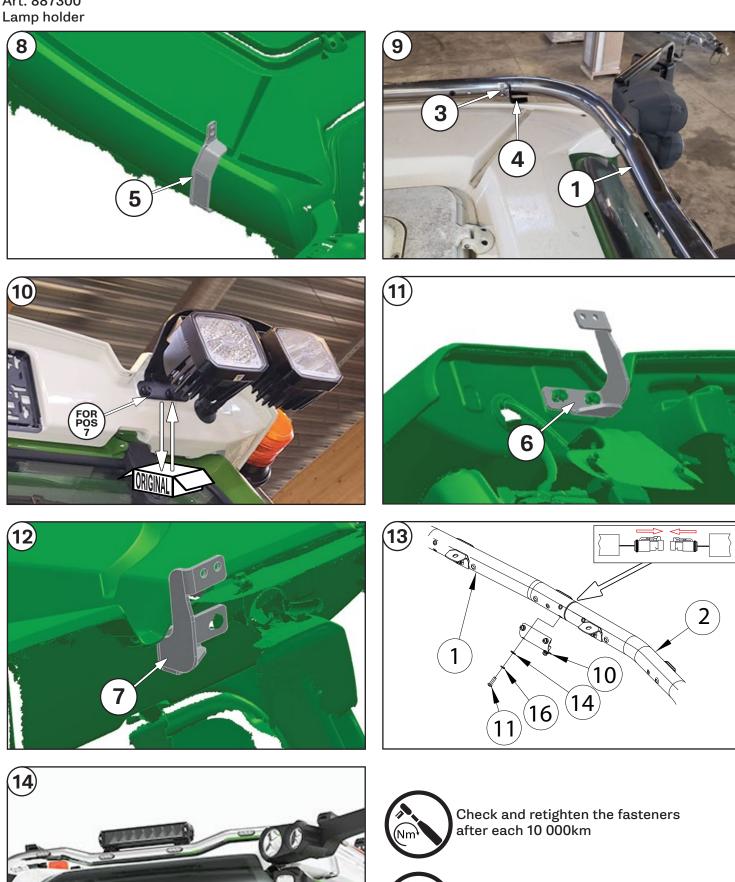

In case of any defects or damage to the METEC product upon delivery, contact the reseller or point of sale where you made your purchase for resulction

Clean and wash the product twice a

month to prevent corrosion