


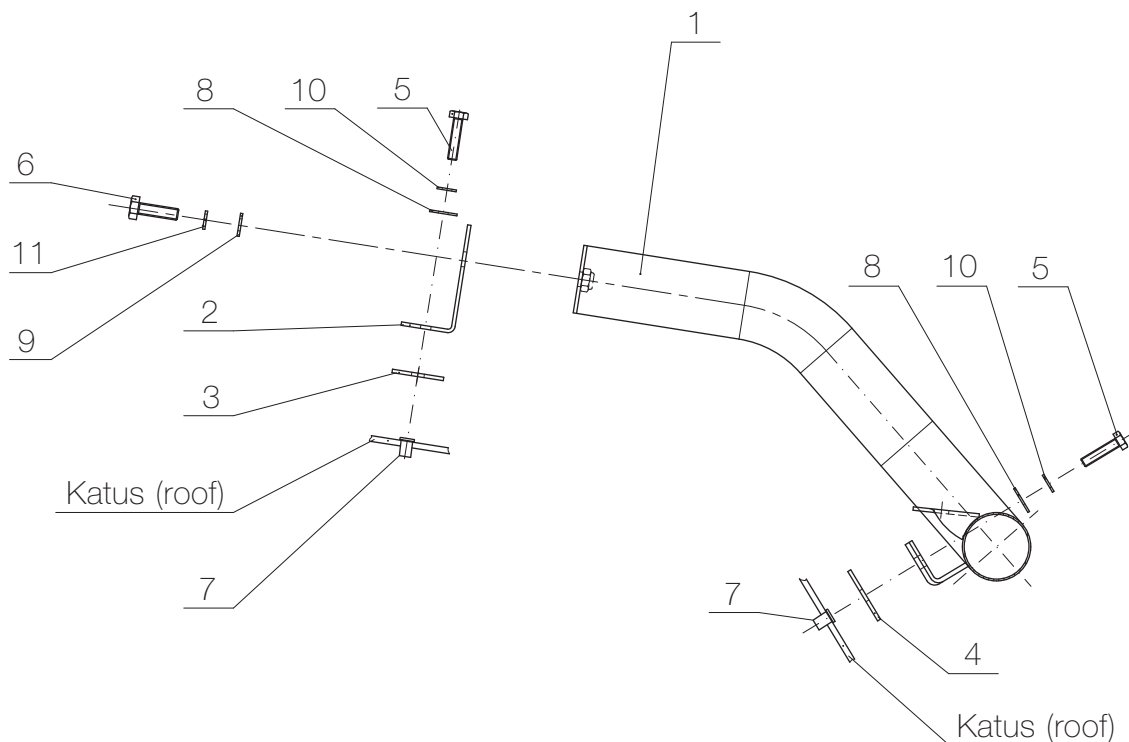

1. Laternakandur / Lampholder	1
2. Vinkel / angeled plate	2
3. Kompensaator / rubber plate	2
4. Kompensaator / rubber plate	2
5. Polt / bolt M8x30 mm	6
6. Polt / bolt M10x25 mm	2
7. Tõmbemutter / blind rivet nut M8	6
8. Seib / washer 8,4x24x2 mm	6
9. Seib / washer 10,5x20x2 mm	2
10. Vedruseib / spring washer A8	6
11. Vedruseib / spring washer A10	2



13
17



d=13 mm



- Attach the angeled plates no. 2 to the lampholder.
- Place the lampholder to the middle of the roof and mark 6 holes through the angeled plates.
- Drill 6 holes d=13 mm through the roof.
- Fill the drilled holes with silicone.
- Mount the blind rivet nuts M8.
- Mount the lampholder.

- Measures: 180x470x1540 mm.
- Weight: 6,8 kg.
- Time of mounting: 30 min.