


# VOLVO FH 2002- Front protection pipe Ø60

## BATV300 - BATV301

- 1. protection pipe /
- 2. bracket /
- 3. bracket /
- 4. bracket /
- 5. bracket /
- 6. bolt / M8x25 mm

- 1 7. bolt / M10x25 mm
- 1 8. nut M8 DIN 985
- 1 9. washer / 8,4x24x2 mm
- 1 10. washer /
- 1 11. spring washer / A8
- 14 12. spring washer A10

- 2
- 8
- 22
- 2
- 6
- 2

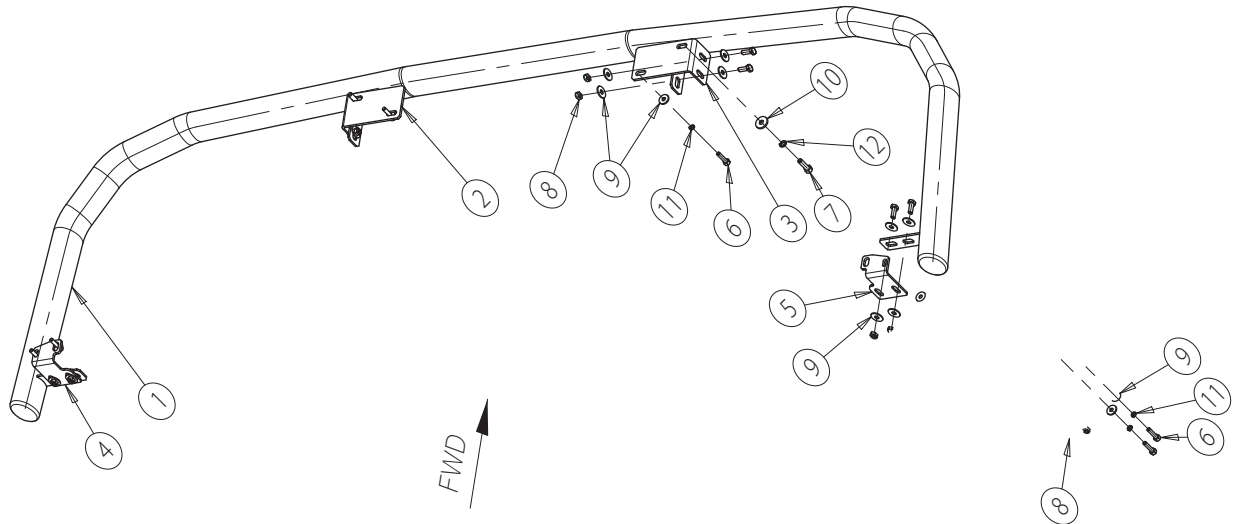

- Measures / : 60x780x2470 mm.
- Weight /: 10,5 kg.
- Time of mounting : 40 min.



- Mount brackets no. 2 and 3 (pic. 1). Mount brackets no. 4 and 5 (pic. 2).
- Mount the front protection pipe.

