




Renault Trafic / Opel Vivaro 14-

Art. 82844179, 82844171

Esistangekaitse | Cityguard | Передняя защита



- | | |
|---|---|
| 1. Esistangekaitse / cityguard /
передняя защитна | 1 |
| 2. Kronstein / bracket / кронштейн | 1 |
| 3. Kronstein / bracket / кронштейн | 1 |
| 4. Puks / bushing / букса | 2 |
| 5. T-polt / T-bolt / Т-болт | 2 |
| 6. Polt / bolt / болт M8x25 | 4 |
| 7. Polt / bolt / болт M8x100 | 2 |
| 8. Mutter / nut / гайка M8 DIN 934 | 2 |
| 9. Mutter / nut / гайка M8 DIN 985 | 6 |
| 10. Seib / washer / шайба 8,4x16x1,6 | 6 |
| 11. Seib / washer / шайба 8,4x24x2 | 8 |
| 12. Vedruseib / spring washer /
пружинная шайба A8 | 2 |

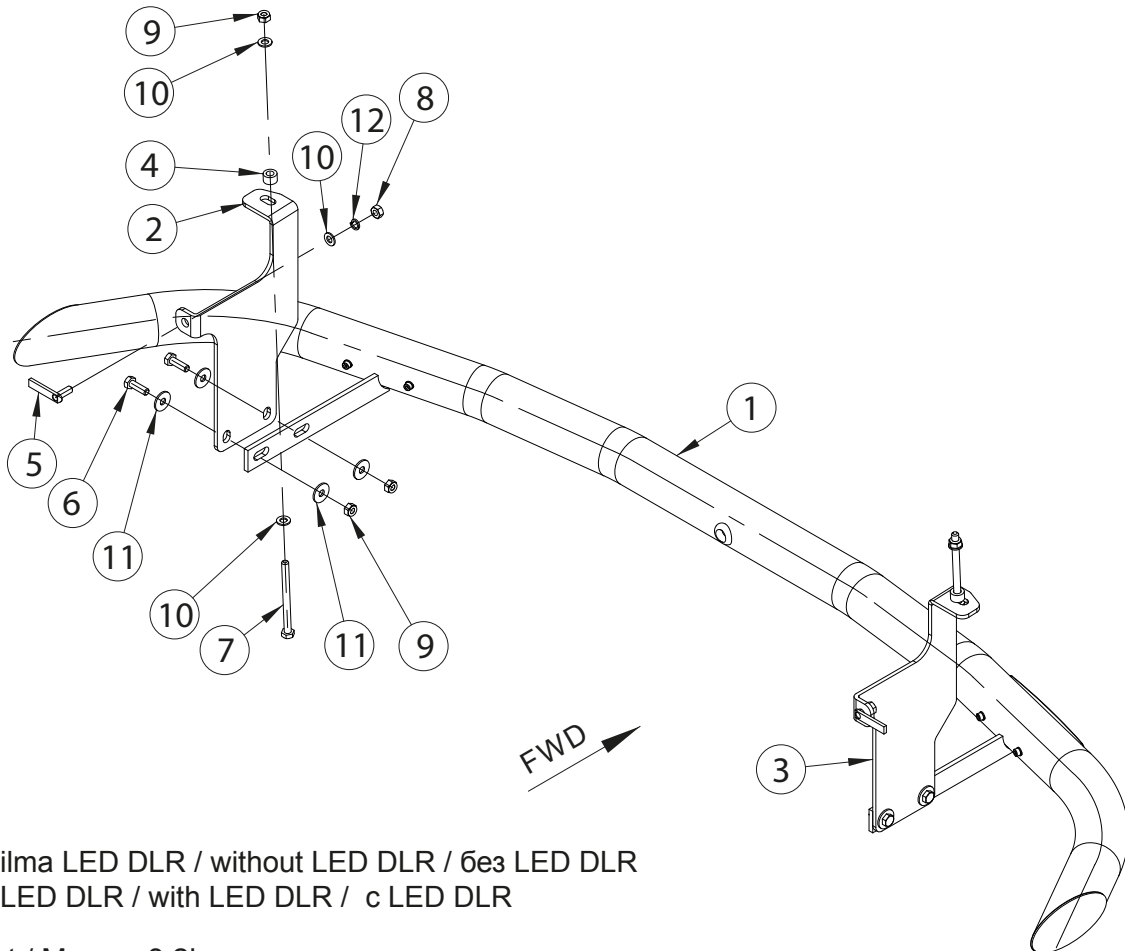

M8 - 25Nm

82844179 - ilma LED DLR / without LED DLR / без LED DLR

82844171 - LED DLR / with LED DLR / с LED DLR




Kaal /Weight / Масса: 8,2kg


Paigaldusaeg / Time of mounting / Время установки: 45min

Vajalikud tööriistad / Required Tools / Необходимые инструменты



Renault Trafic / Opel Vivaro 14-
Esistangekaitse | Cityguard | Передняя защита

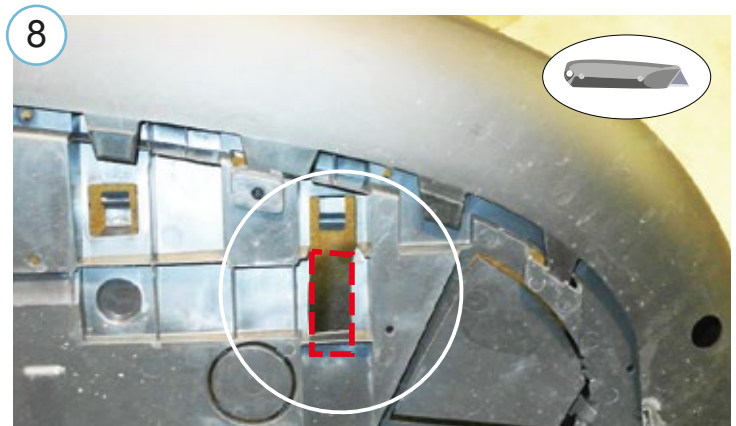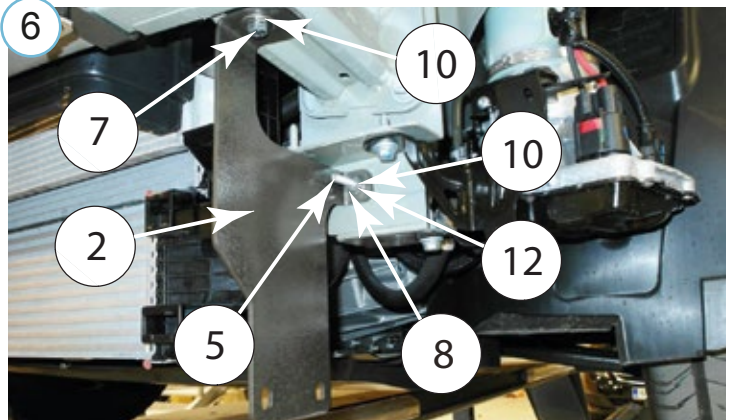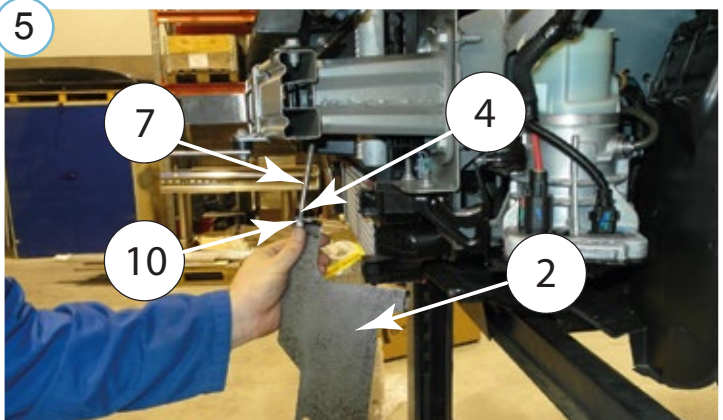

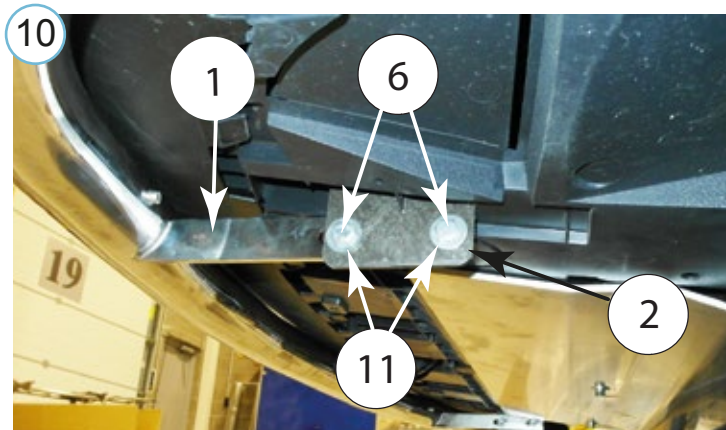

DRL päevasõidutulede elektriühendused teostada kvalifitseeritud autoelektriku poolt vastavalt Philipsi paigaldusjuhendile

Installation of the DRL lights can be carried out by qualified electrician only, in accordance with the Philips's instructions

Монтаж DRL огней может быть выполнено только квалифицированным электриком, в соответствии с инструкциями Philips