

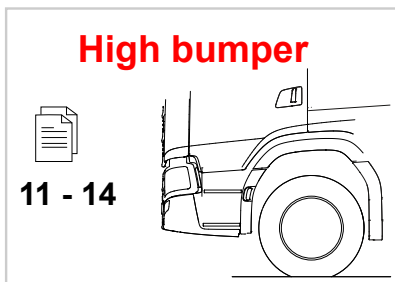


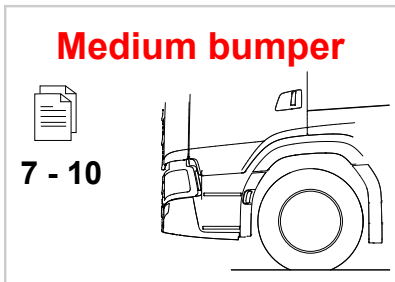

# Scania R 2016-

Art. 864504, 864505

Esistangekaitse 3-osaline | Cityguard 3 part design | Передняя дуга 3 части дизайна | Cityguard 3-teiliges Design

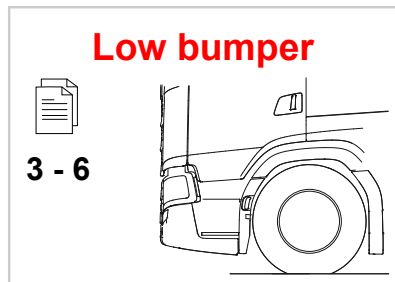


1. Esistangekaitse (nurgaosa) / Cityguard (corner) / Передняя защита (угол) / Cityguard (Ecke)	1
2. Esistangekaitse (nurgaosa) / Cityguard (corner) / Передняя защита (угол) / Cityguard (Ecke)	1
3. Esistangekaitse (keskmise osa) / Cityguard (middle part) / Передняя защита (средняя часть) / Cityguard (Mittelteil)	1
4. Kinnitustoru / mounting pipe / монтажная труба / Montagerohr	1
5. Kinnitustoru / mounting pipe / монтажная труба / Montagerohr	1
6. Kronstein / bracket / кронштейн / Konsole	2
7. Kronstein / bracket / кронштейн / Konsole	2
8. Kronstein / bracket / кронштейн / Konsole	2
9. Kronstein / bracket / кронштейн / Konsole	1
10. Kronstein / bracket / кронштейн / Konsole	1
11. Mutter / nut / гайка / Mutter M8 DIN 934	14
12. Mutter / nut / гайка / Mutter M8 DIN 985	18
13. Polt / bolt / болт / Bolzen M8x100	2
14. Polt / bolt / болт / Bolzen M8x120	2
15. Polt / bolt / болт / Bolzen M8x140	2
16. Polt / bolt / болт / Bolzen M8x160	2
17. Polt / bolt / болт / Bolzen M8x25	12
18. Polt / bolt / болт / Bolzen M8x40	4
19. Polt / bolt / болт / Bolzen M8x50	6
20. Polt / bolt / болт / Bolzen M8x60	6
21. Puks / bushing / букса / Buchse d=20, l=16	2
22. Puks / bushing / букса / Buchse d=28, l=16	2
23. Puks / bushing / букса / Buchse l=100	4
24. Puks / bushing / букса / Buchse l=25	2
25. Puks / bushing / букса / Buchse l=60	4
26. Seib / washer / шайба / Scheibe 10,5x30x2,5	2
27. Seib / washer / шайба / Scheibe 8,4x16x1,6	8
28. Seib / washer / шайба / Scheibe 8,4x24x2	42
29. Seib / washer / шайба / Scheibe s=5	4
30. Vedruseib / spring washer / пружинная шайба / Federnscheibe A8	10

Kaal / Weight / Масса / Gewicht: 15,0 kg (864504), 14,3 kg (864505)  
Paigaldusaeg / Time of mounting / Время установки / Einbauzeit: 120 min

Vajalikud tööriistad / Required Tools / Необходимые инструменты / Benötigte Werkzeuge




**M8 - 25 Nm**

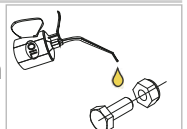


# Scania R 2016-

Esistangekaitse 3-osaline | Cityguard 3 part design | Передняя дуга 3 части дизайна | Cityguard  
3-teiliges Design

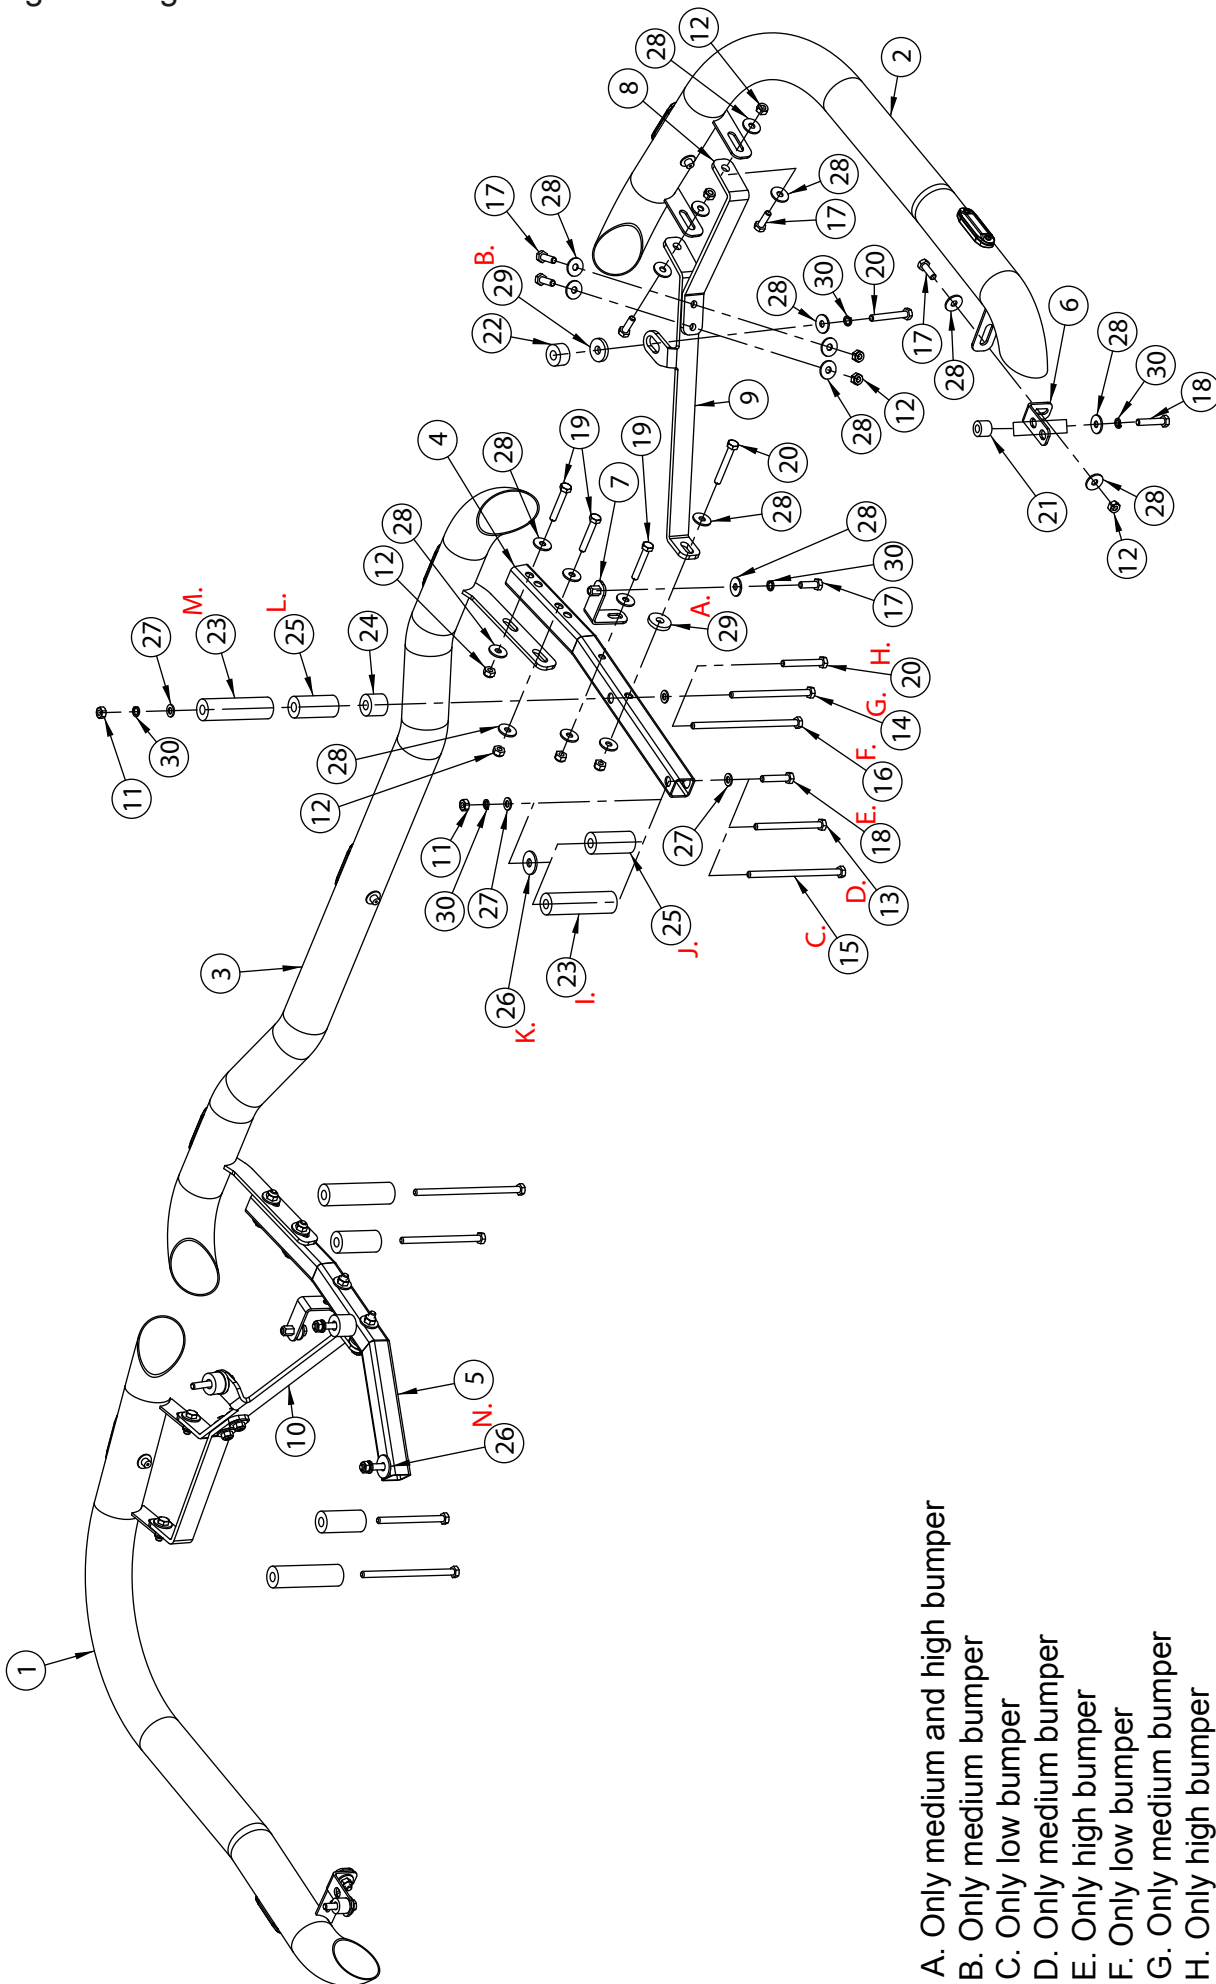

- A. Only medium and high bumper
- B. Only medium bumper
- C. Only low bumper
- D. Only medium bumper
- E. Only high bumper
- F. Only low bumper
- G. Only medium bumper
- H. Only high bumper
- I. Only low bumper
- J. Only medium bumper
- K. Only low and medium bumper
- L. Only medium bumper, use together with 24
- M. Only low bumper, use together with 24
- N. Use with all bumpers









# Low bumper

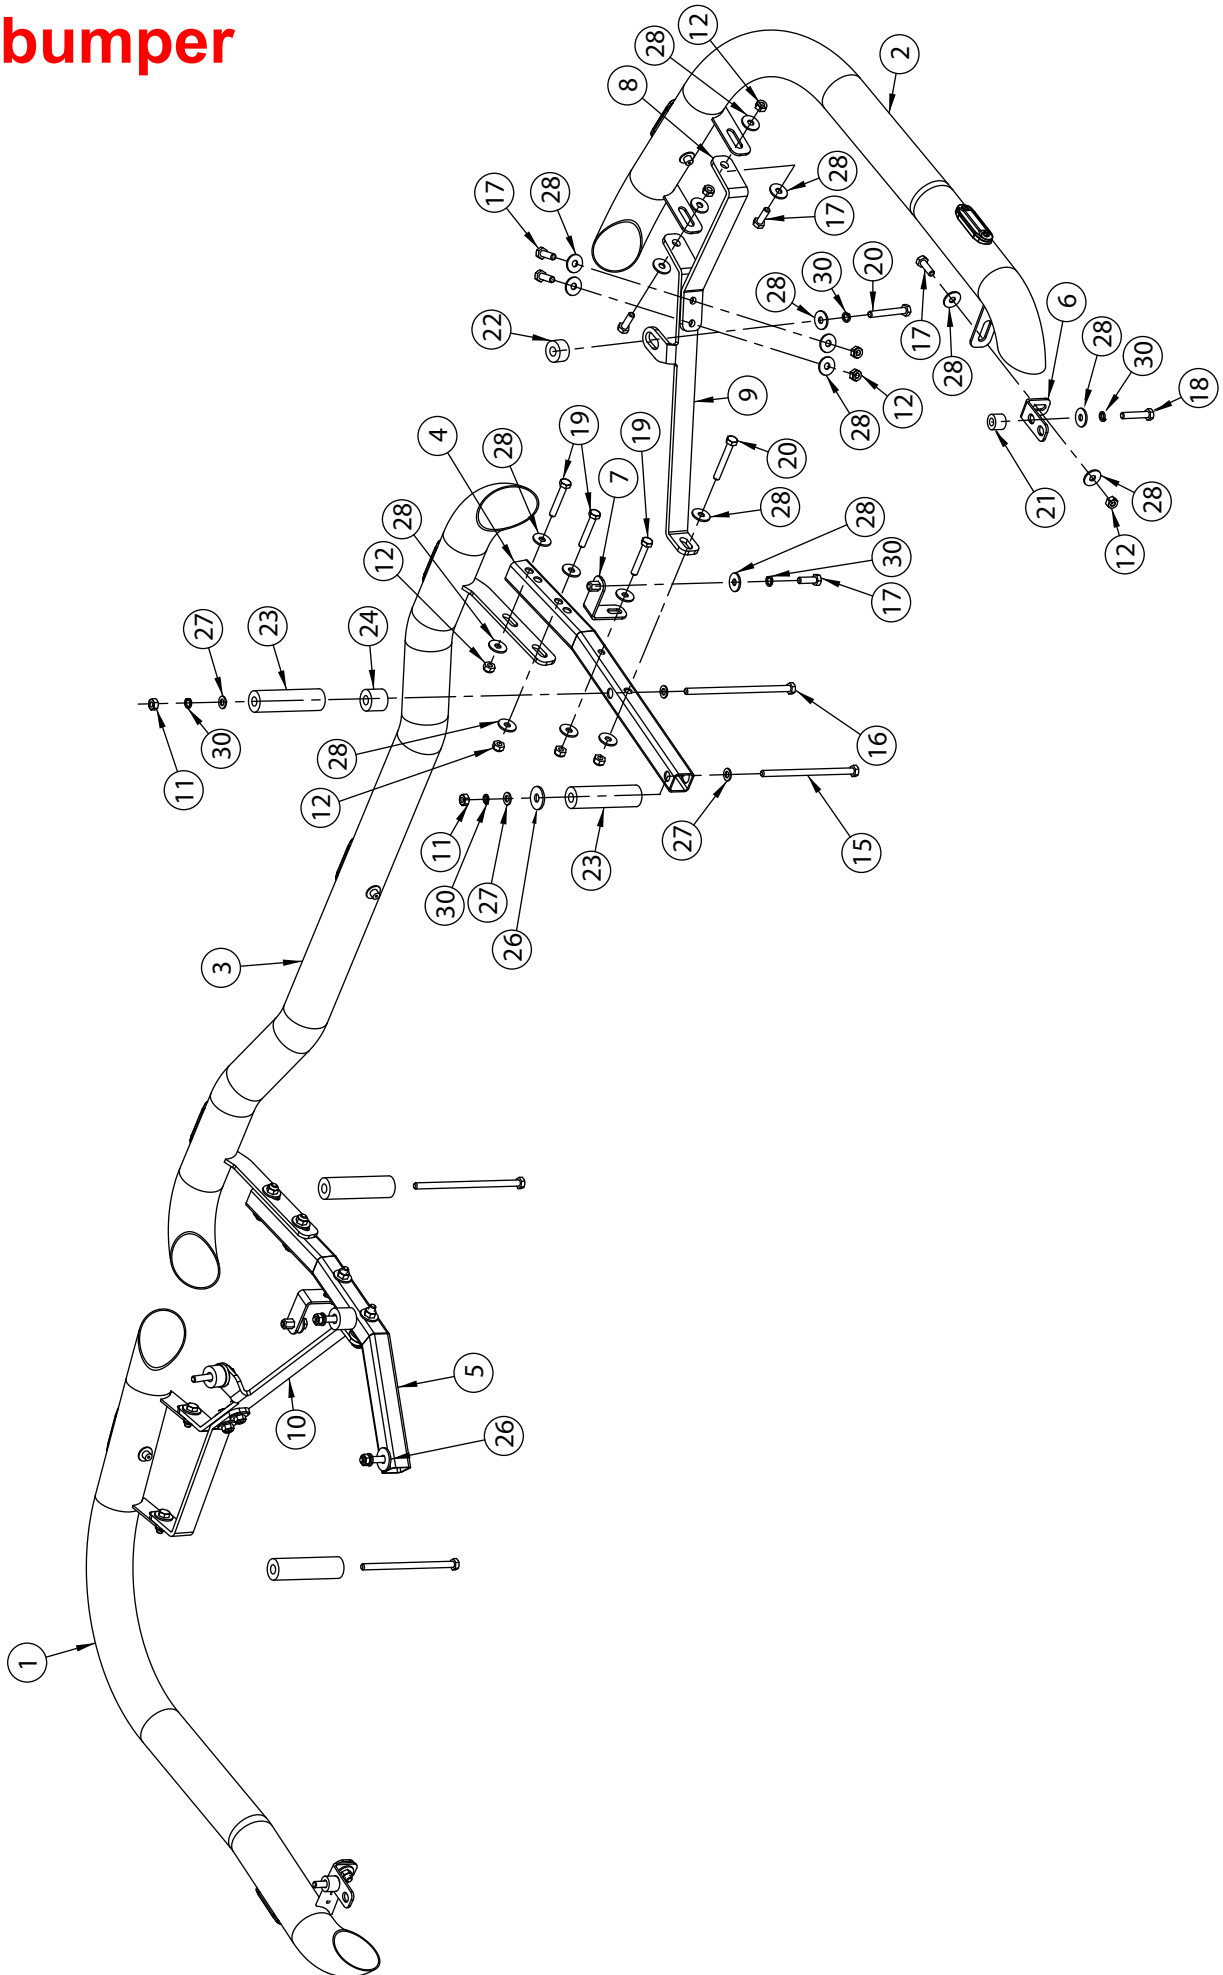

# Scania R 2016-

Esistangekaitse 3-osaline | Cityguard 3 part design | Передняя дуга 3 части дизайна | Cityguard 3-teiliges Design









## Low bumper

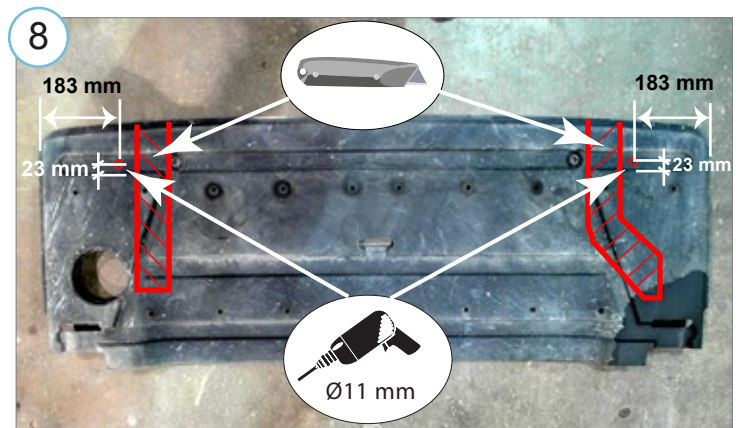
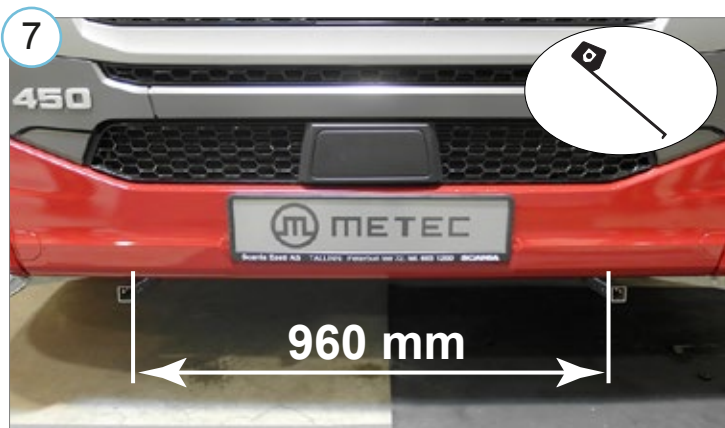
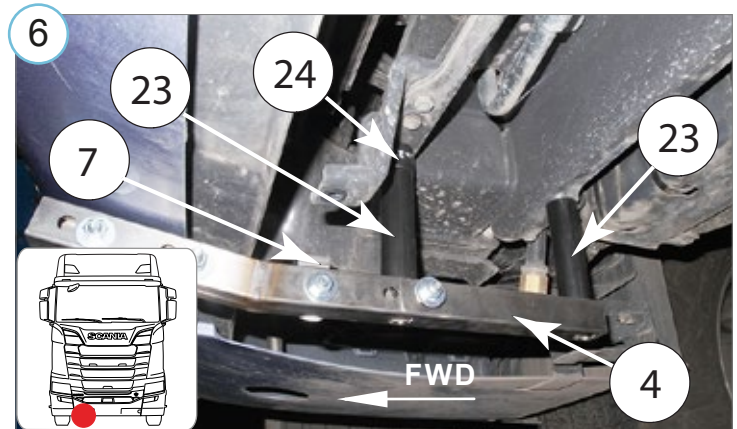
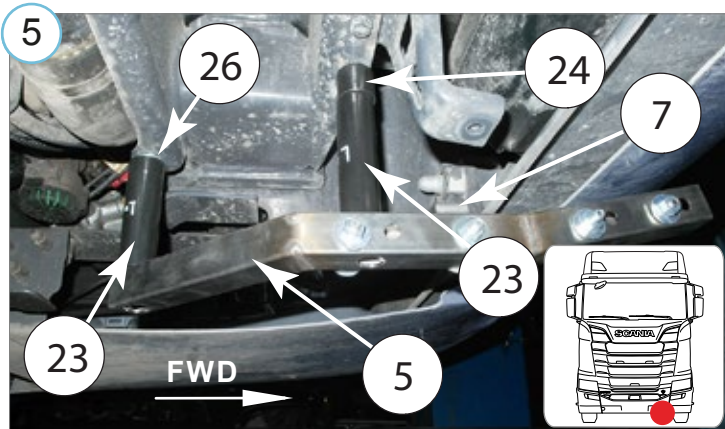
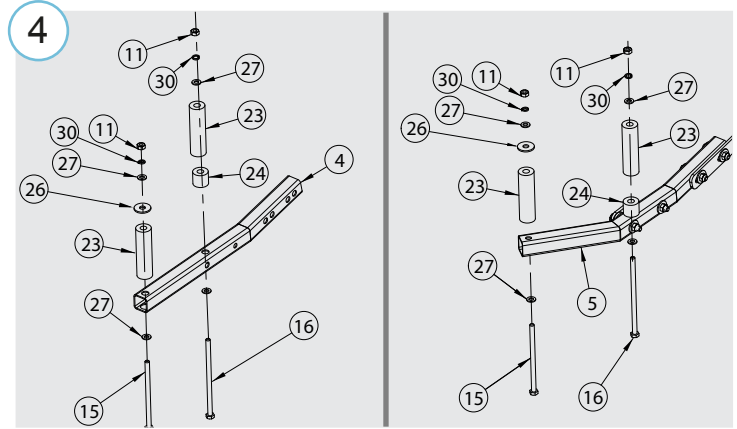
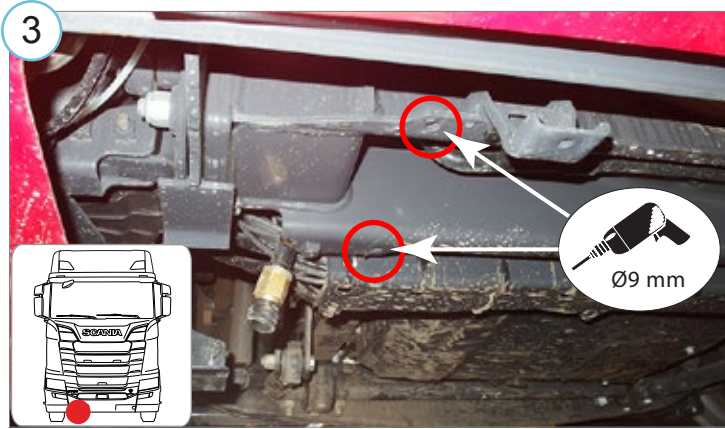
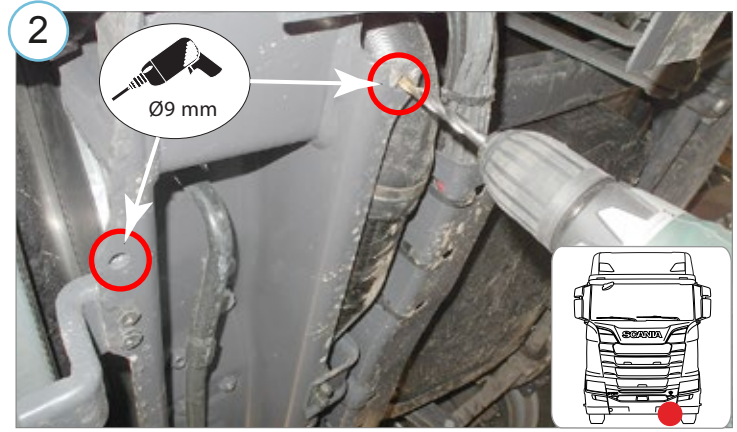
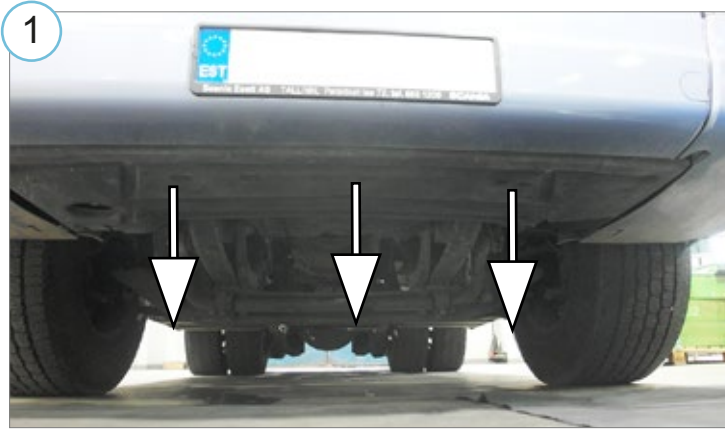


# Scania R 2016-


Esistangekaitse 3-osaline | Cityguard 3 part design | Передняя дуга 3 части дизайна | Cityguard 3-teiliges Design

**Low bumper**

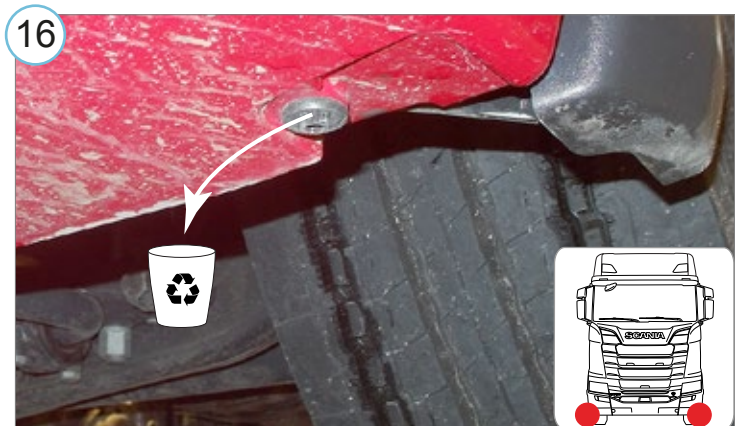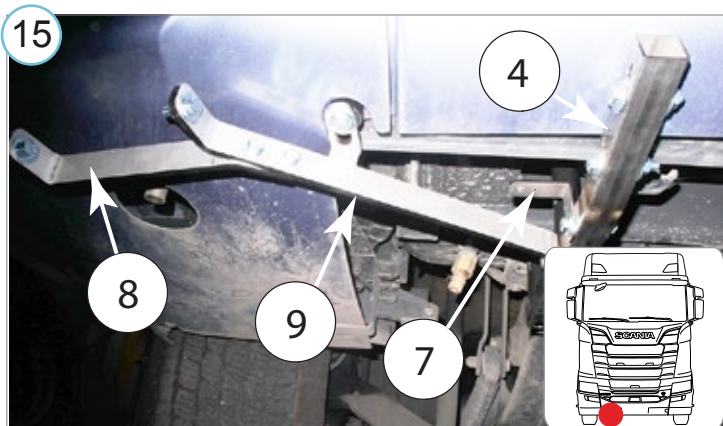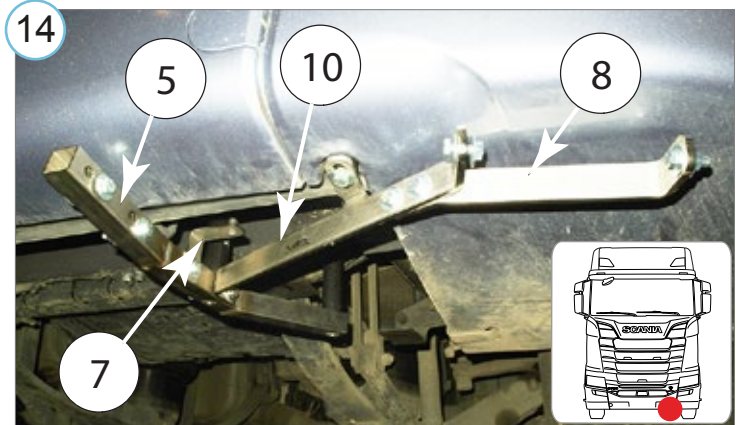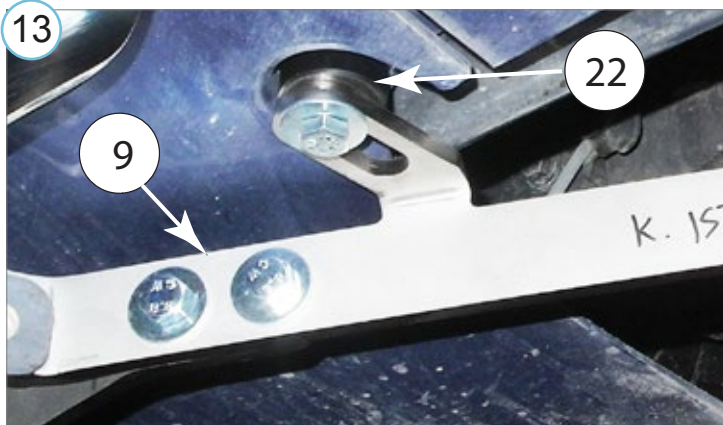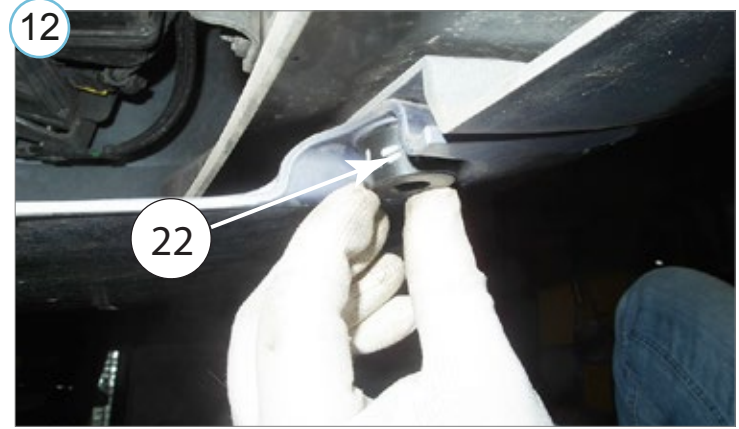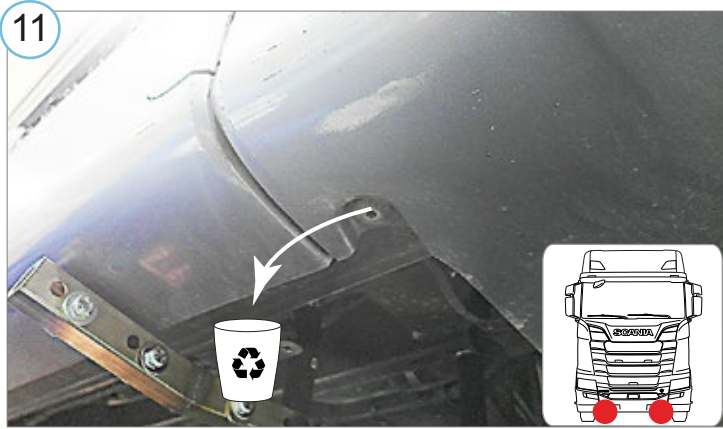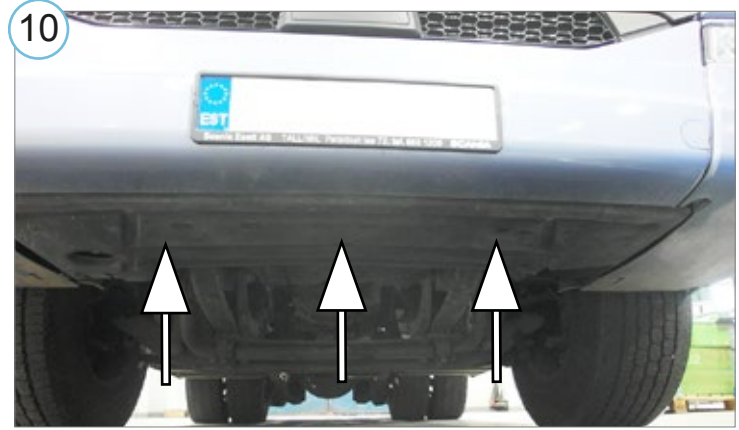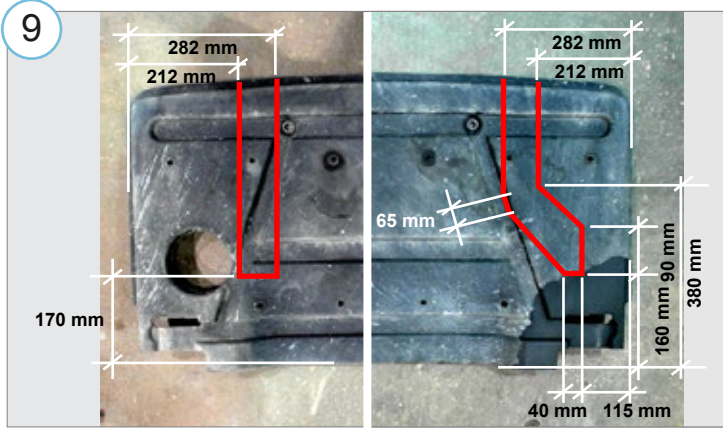

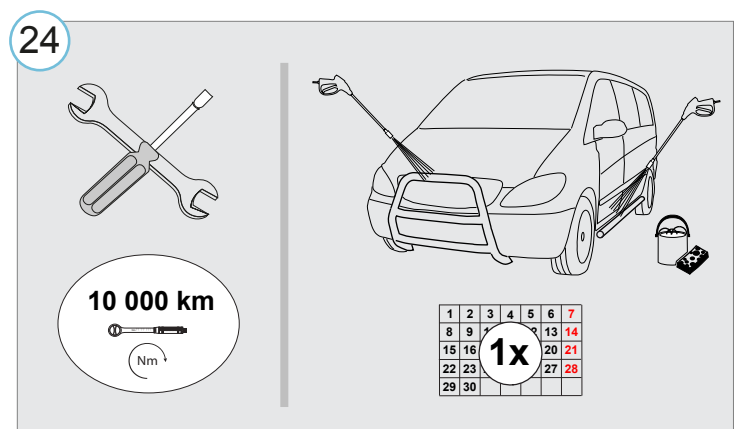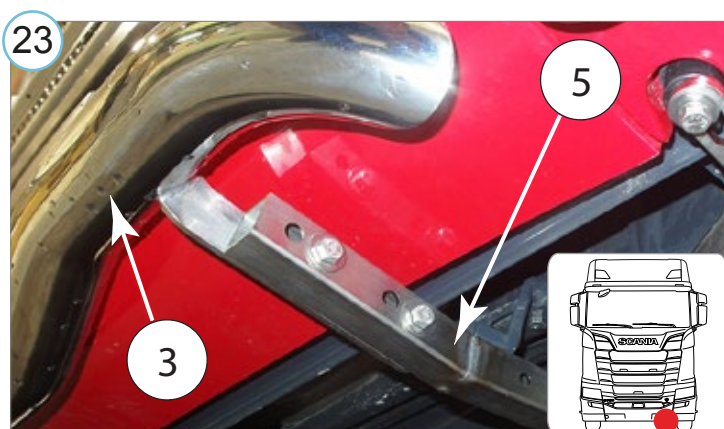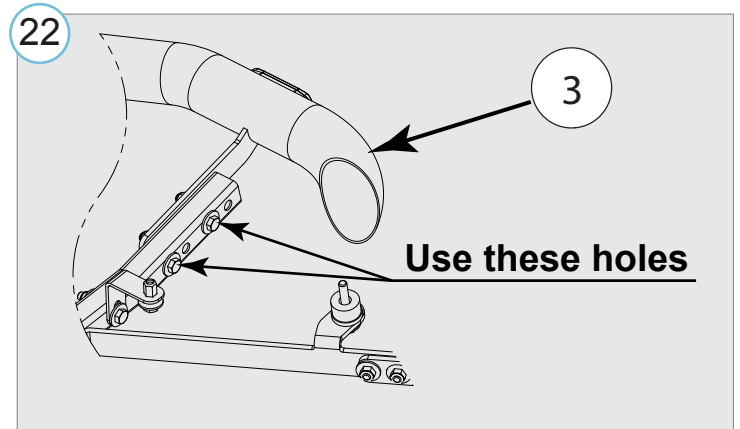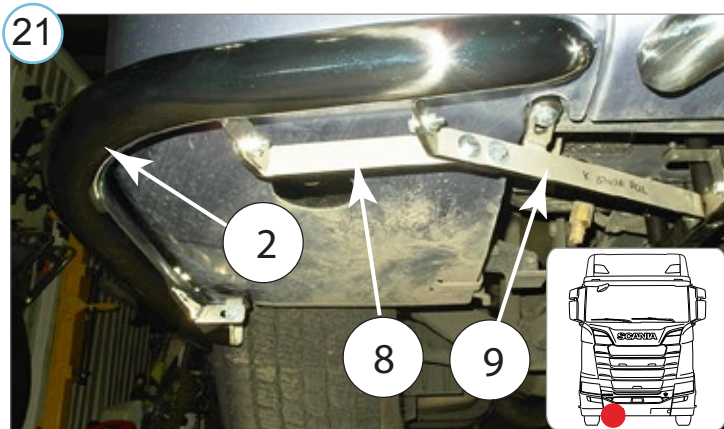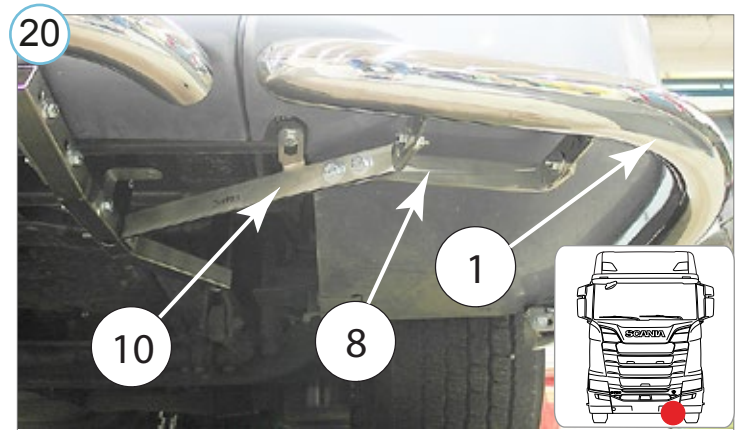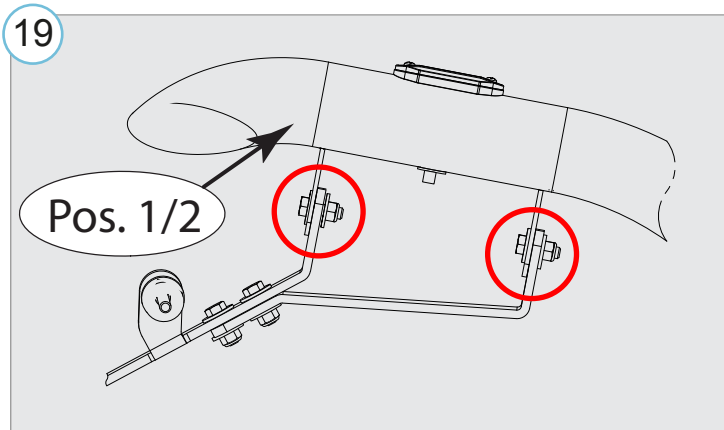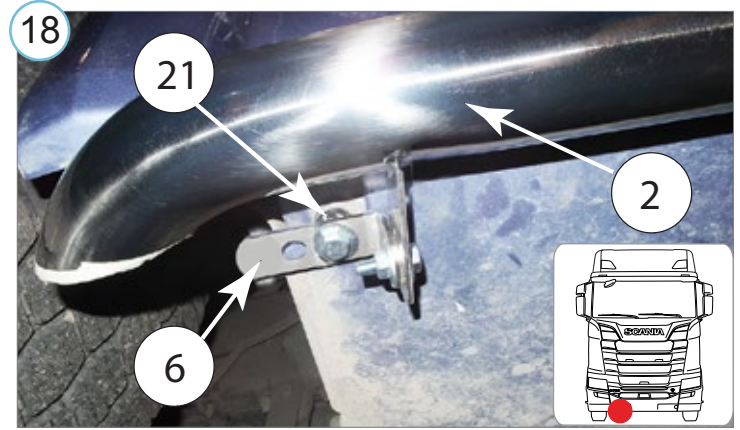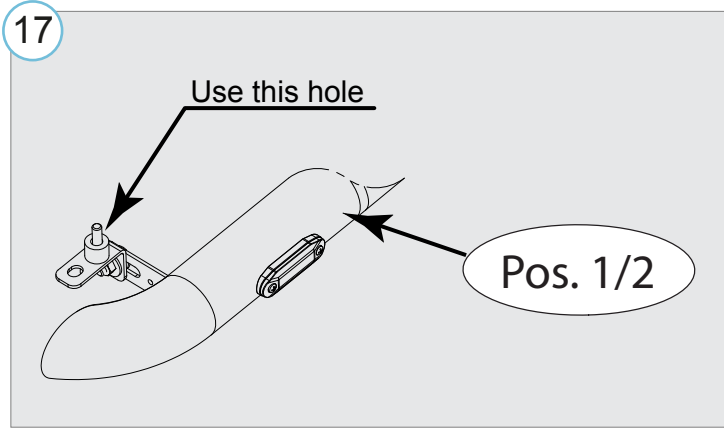









# Medium bumper

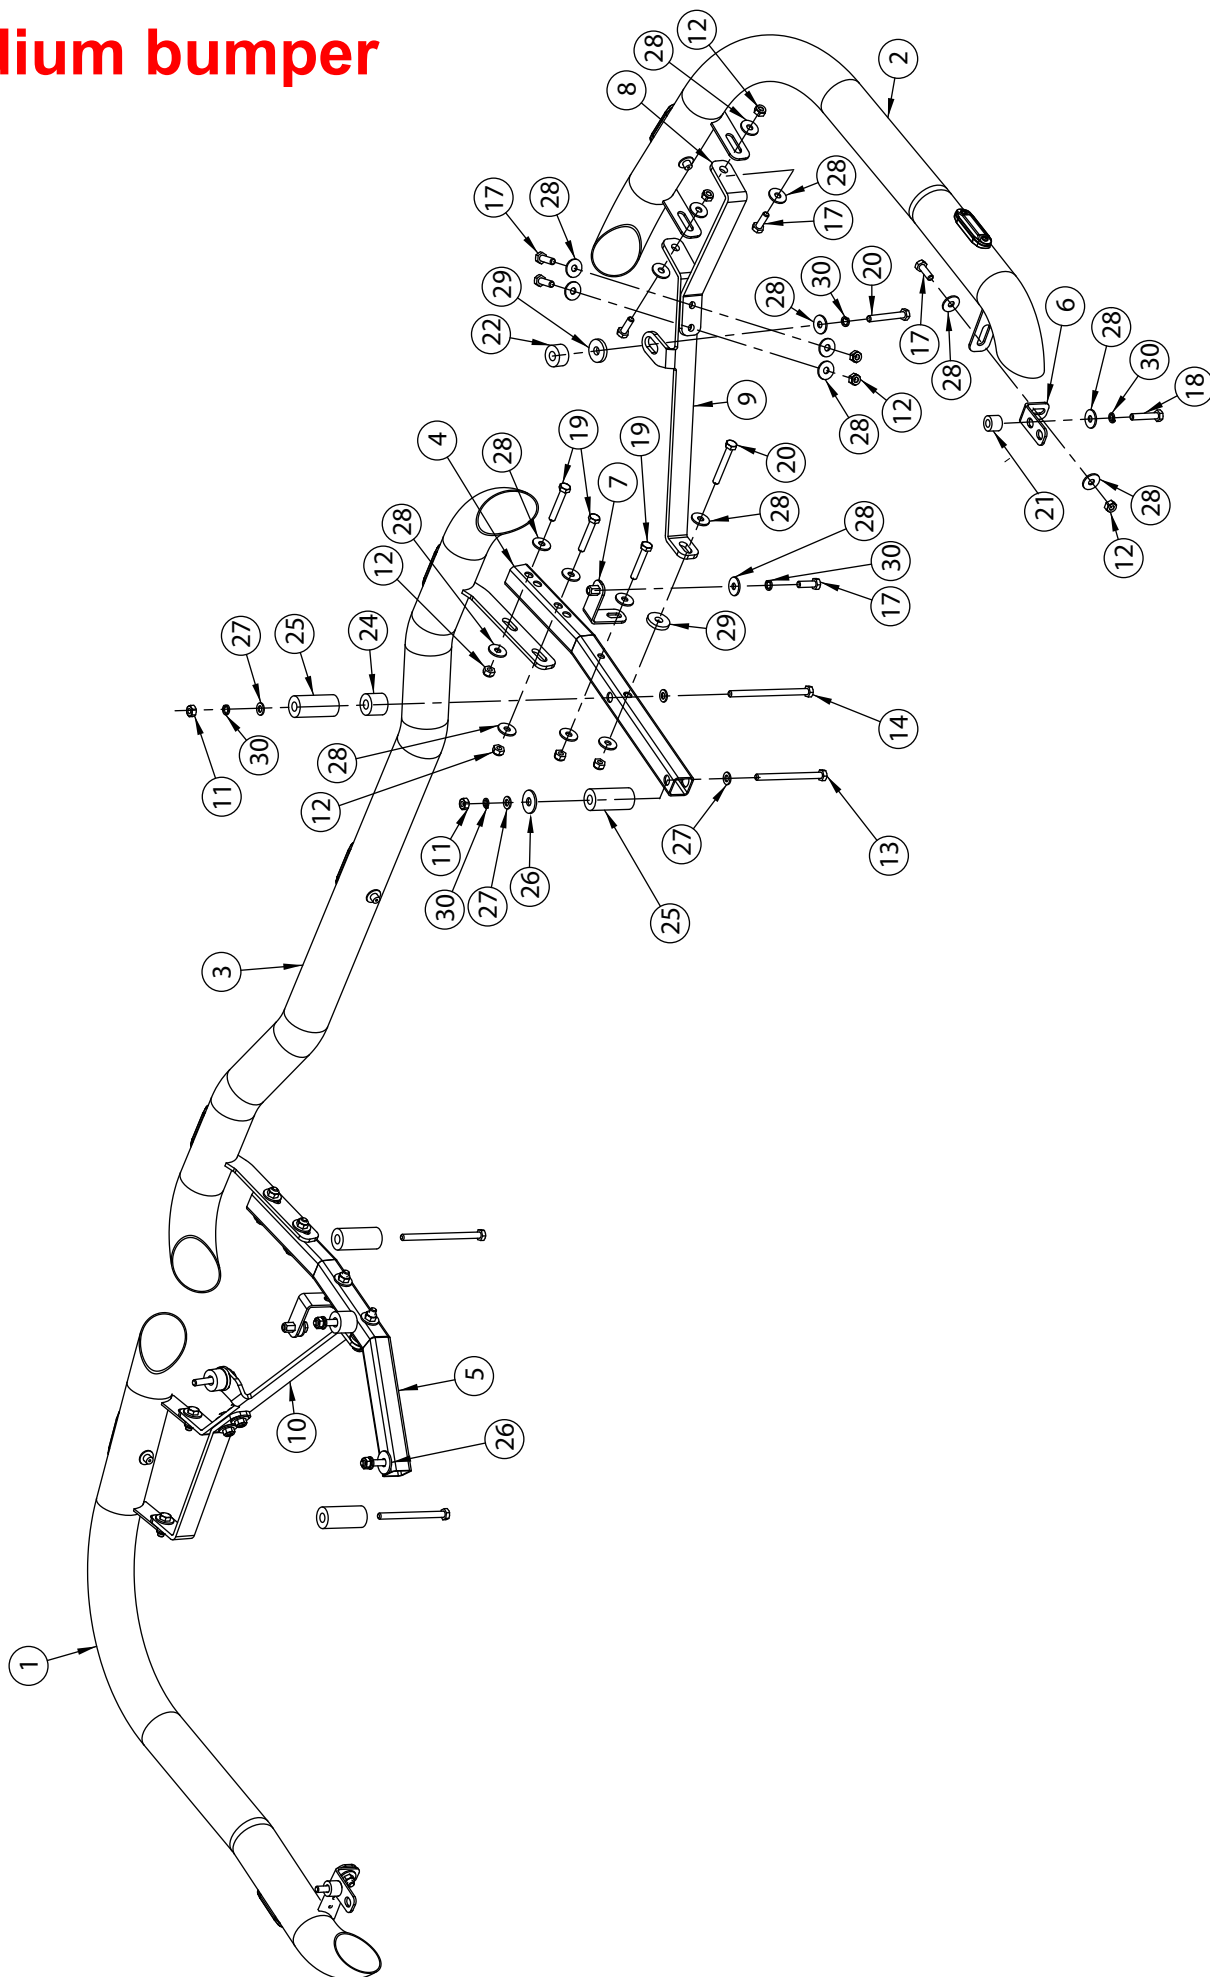









# Scania R 2016-









Esistangekaitse 3-osaline | Cityguard 3 part design | Передняя дуга 3 части дизайна | Cityguard 3-teiliges Design

## Medium bumper

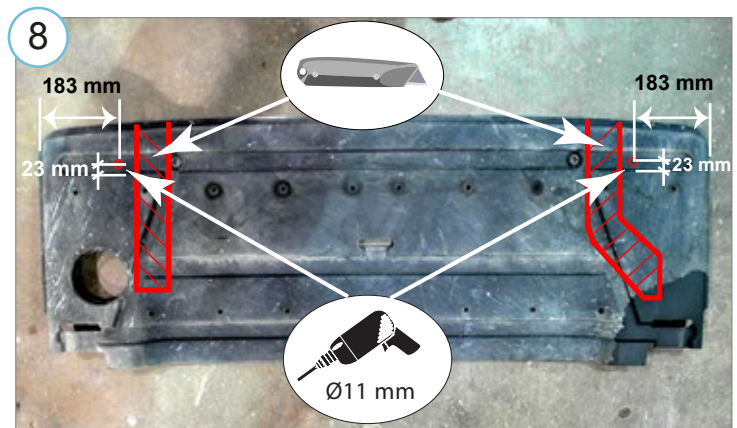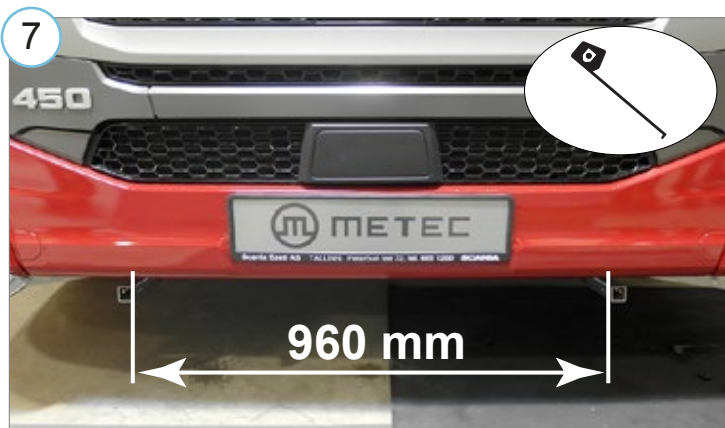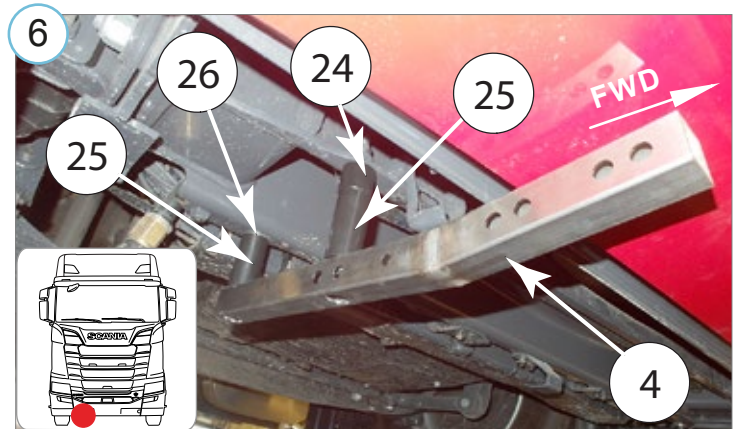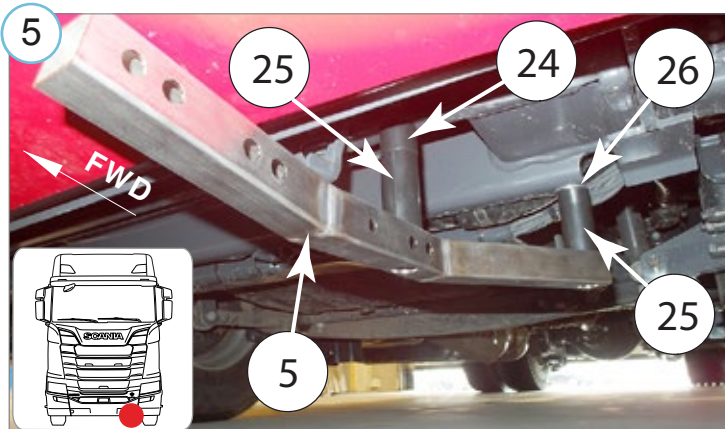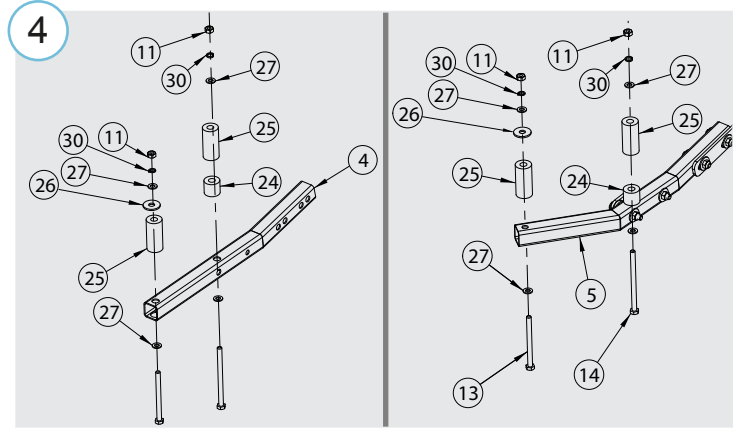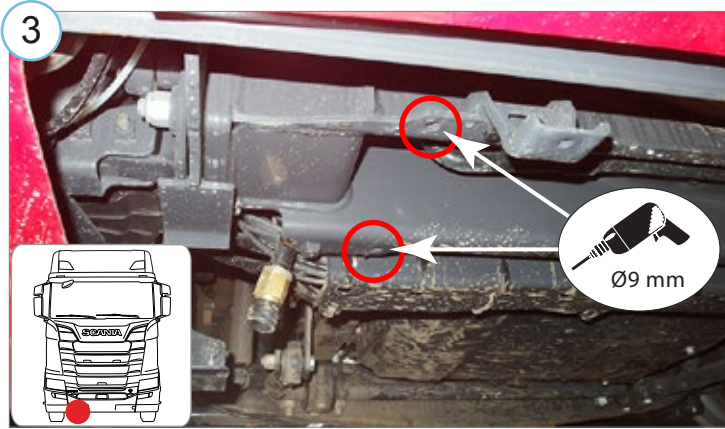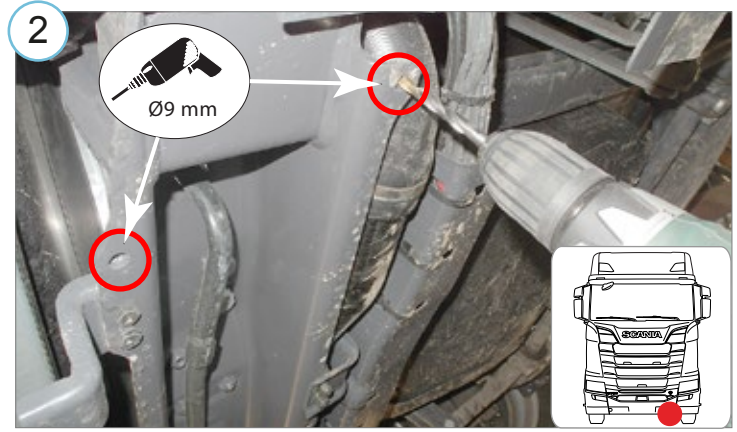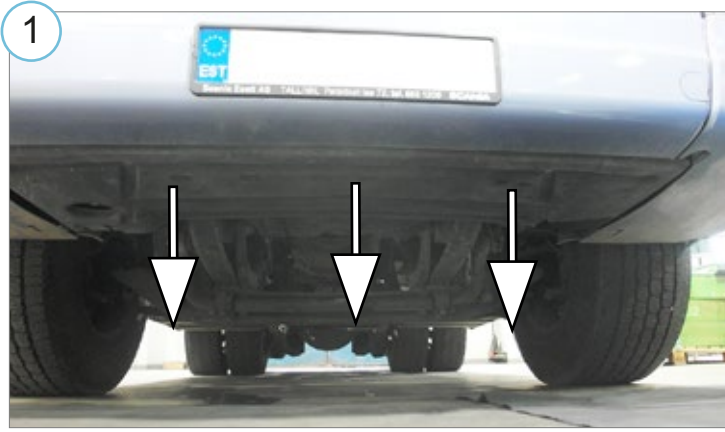




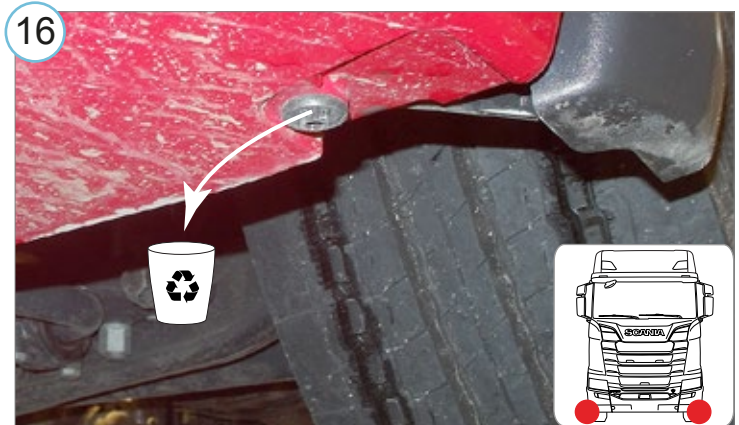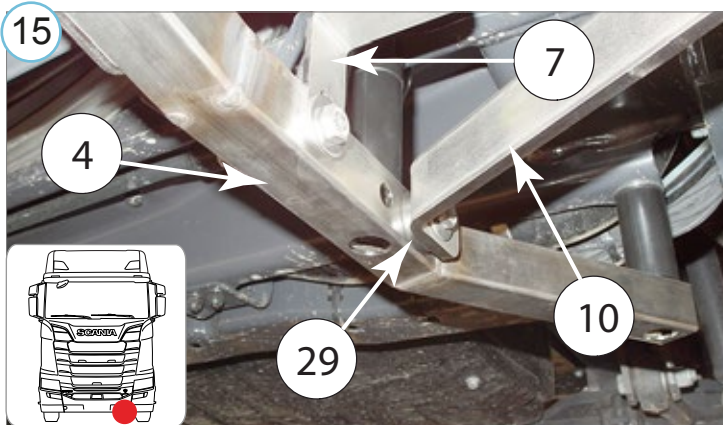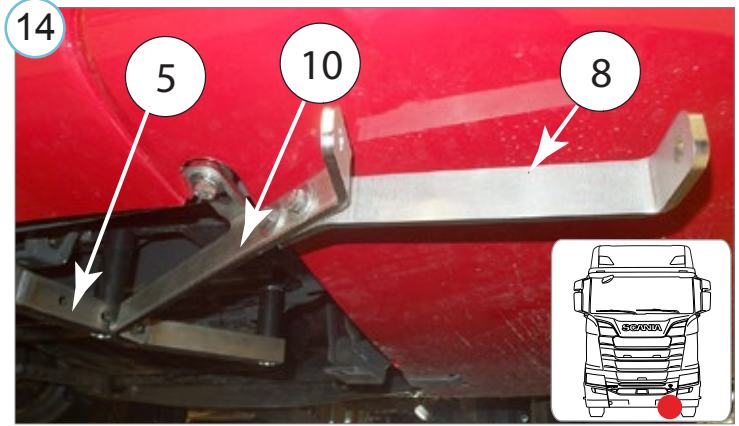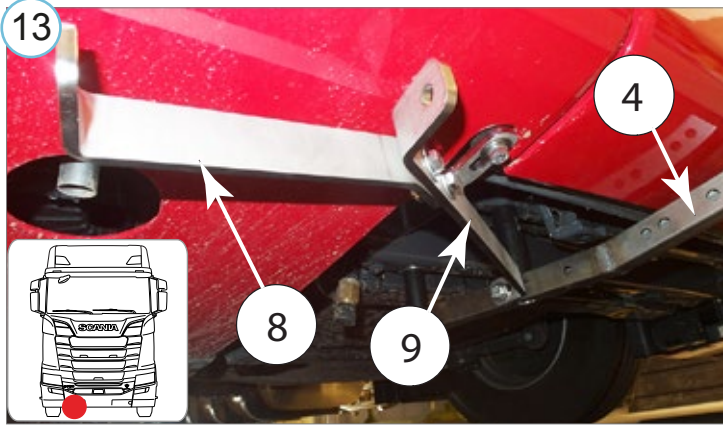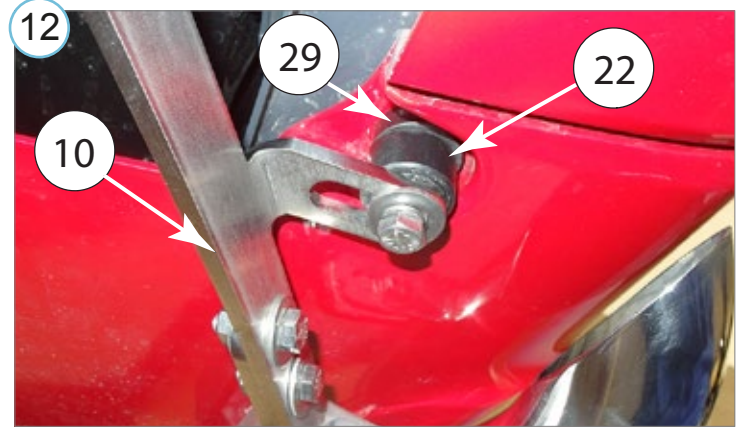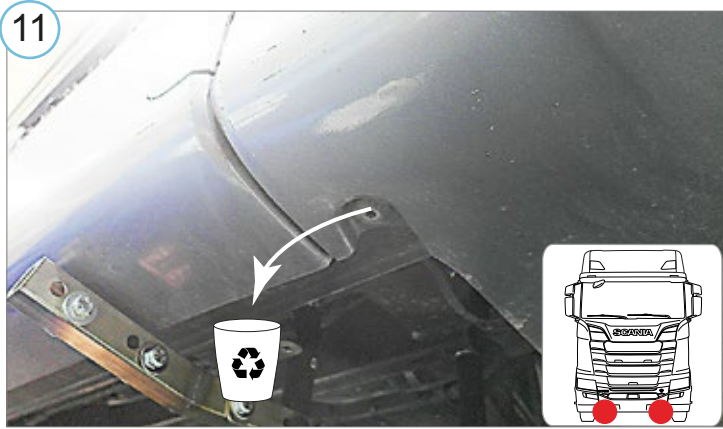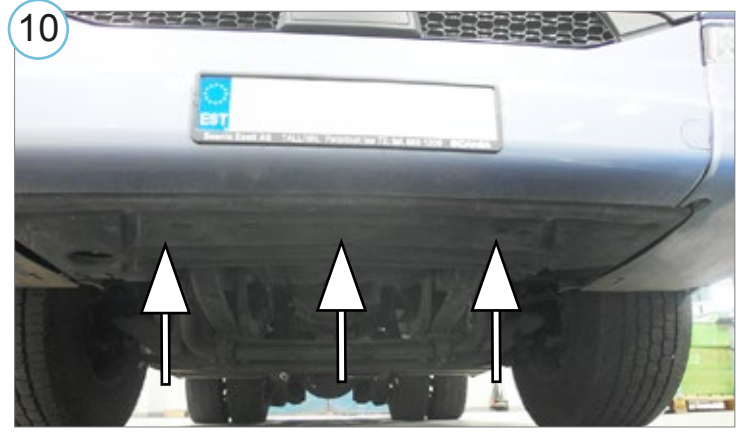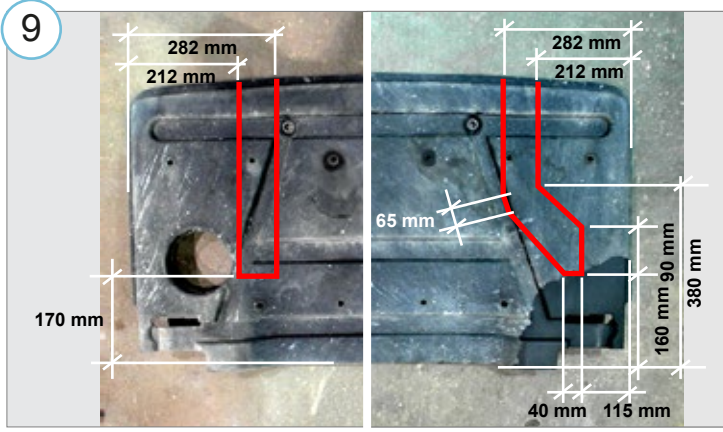

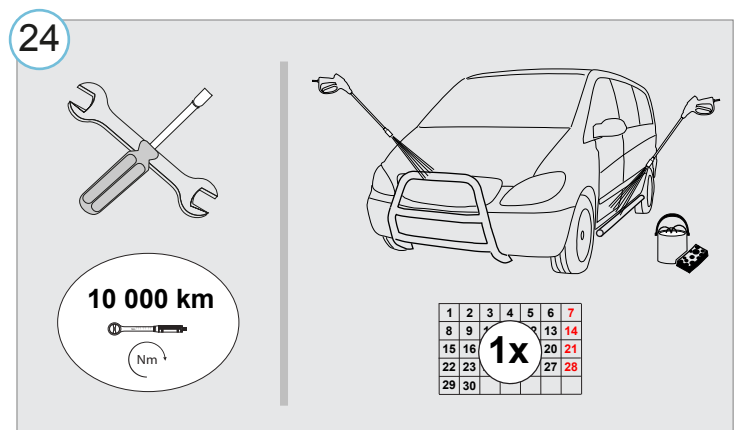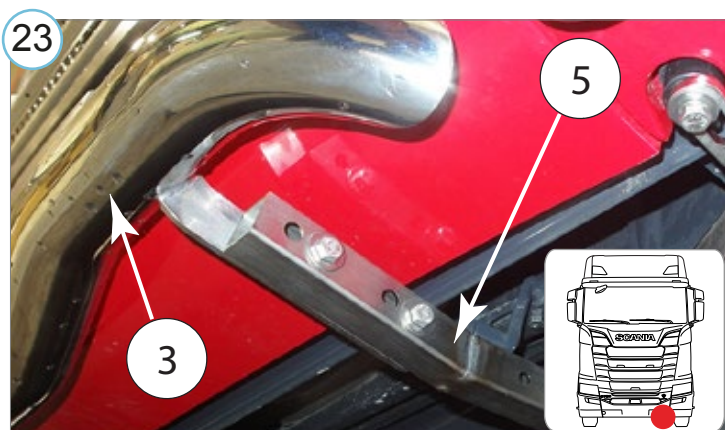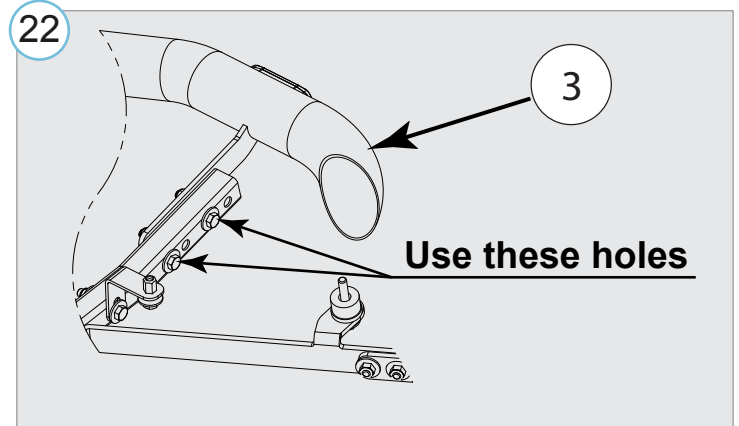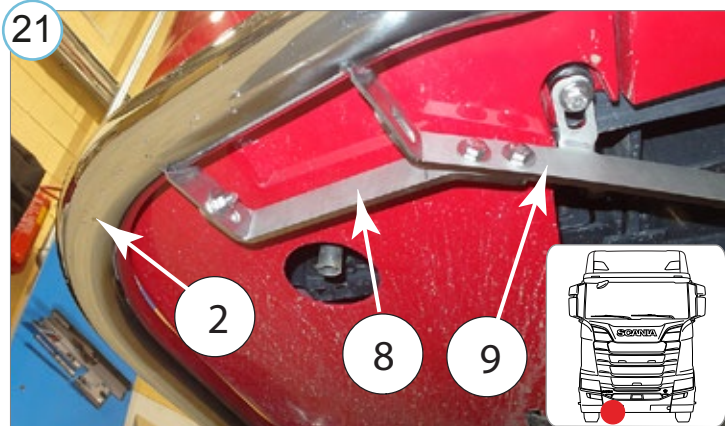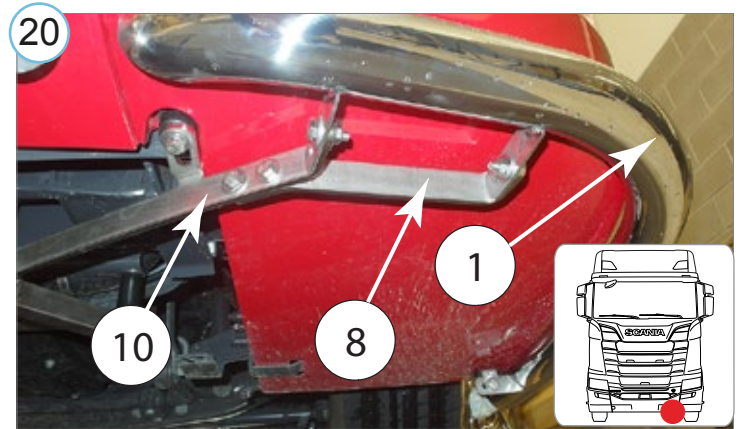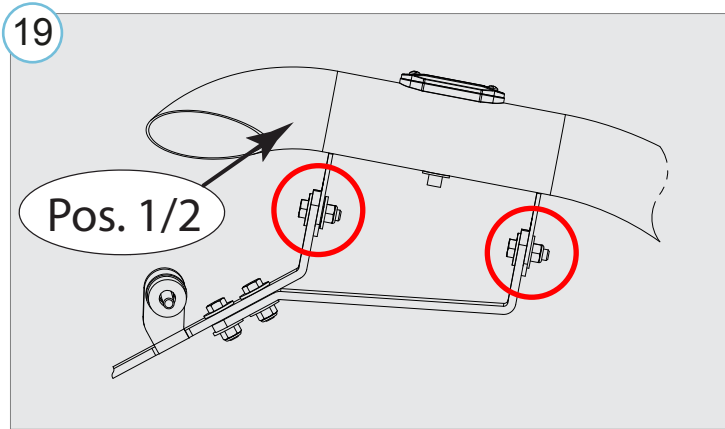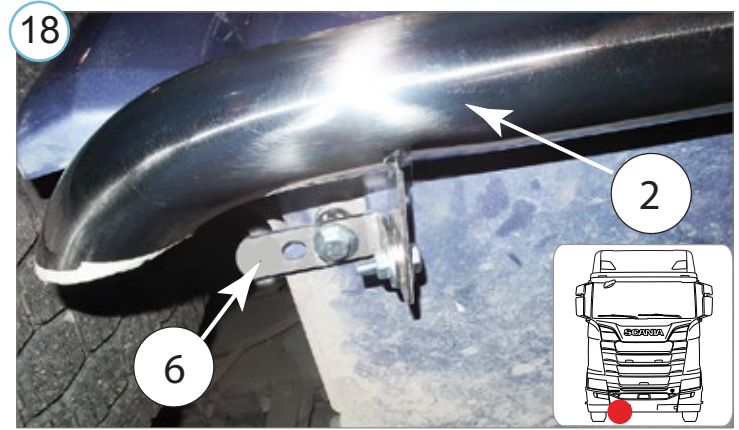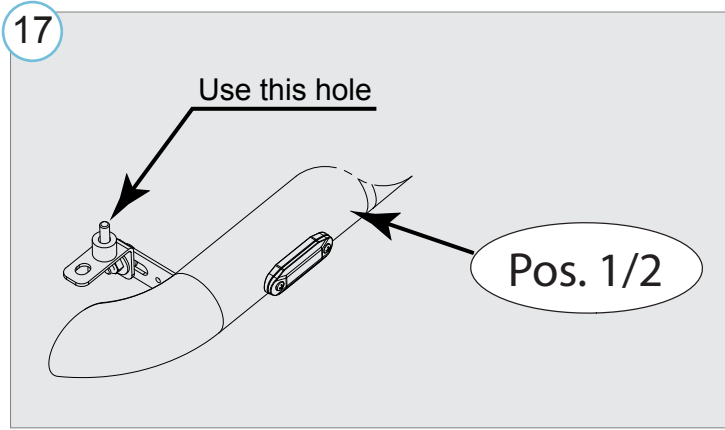









# High bumper

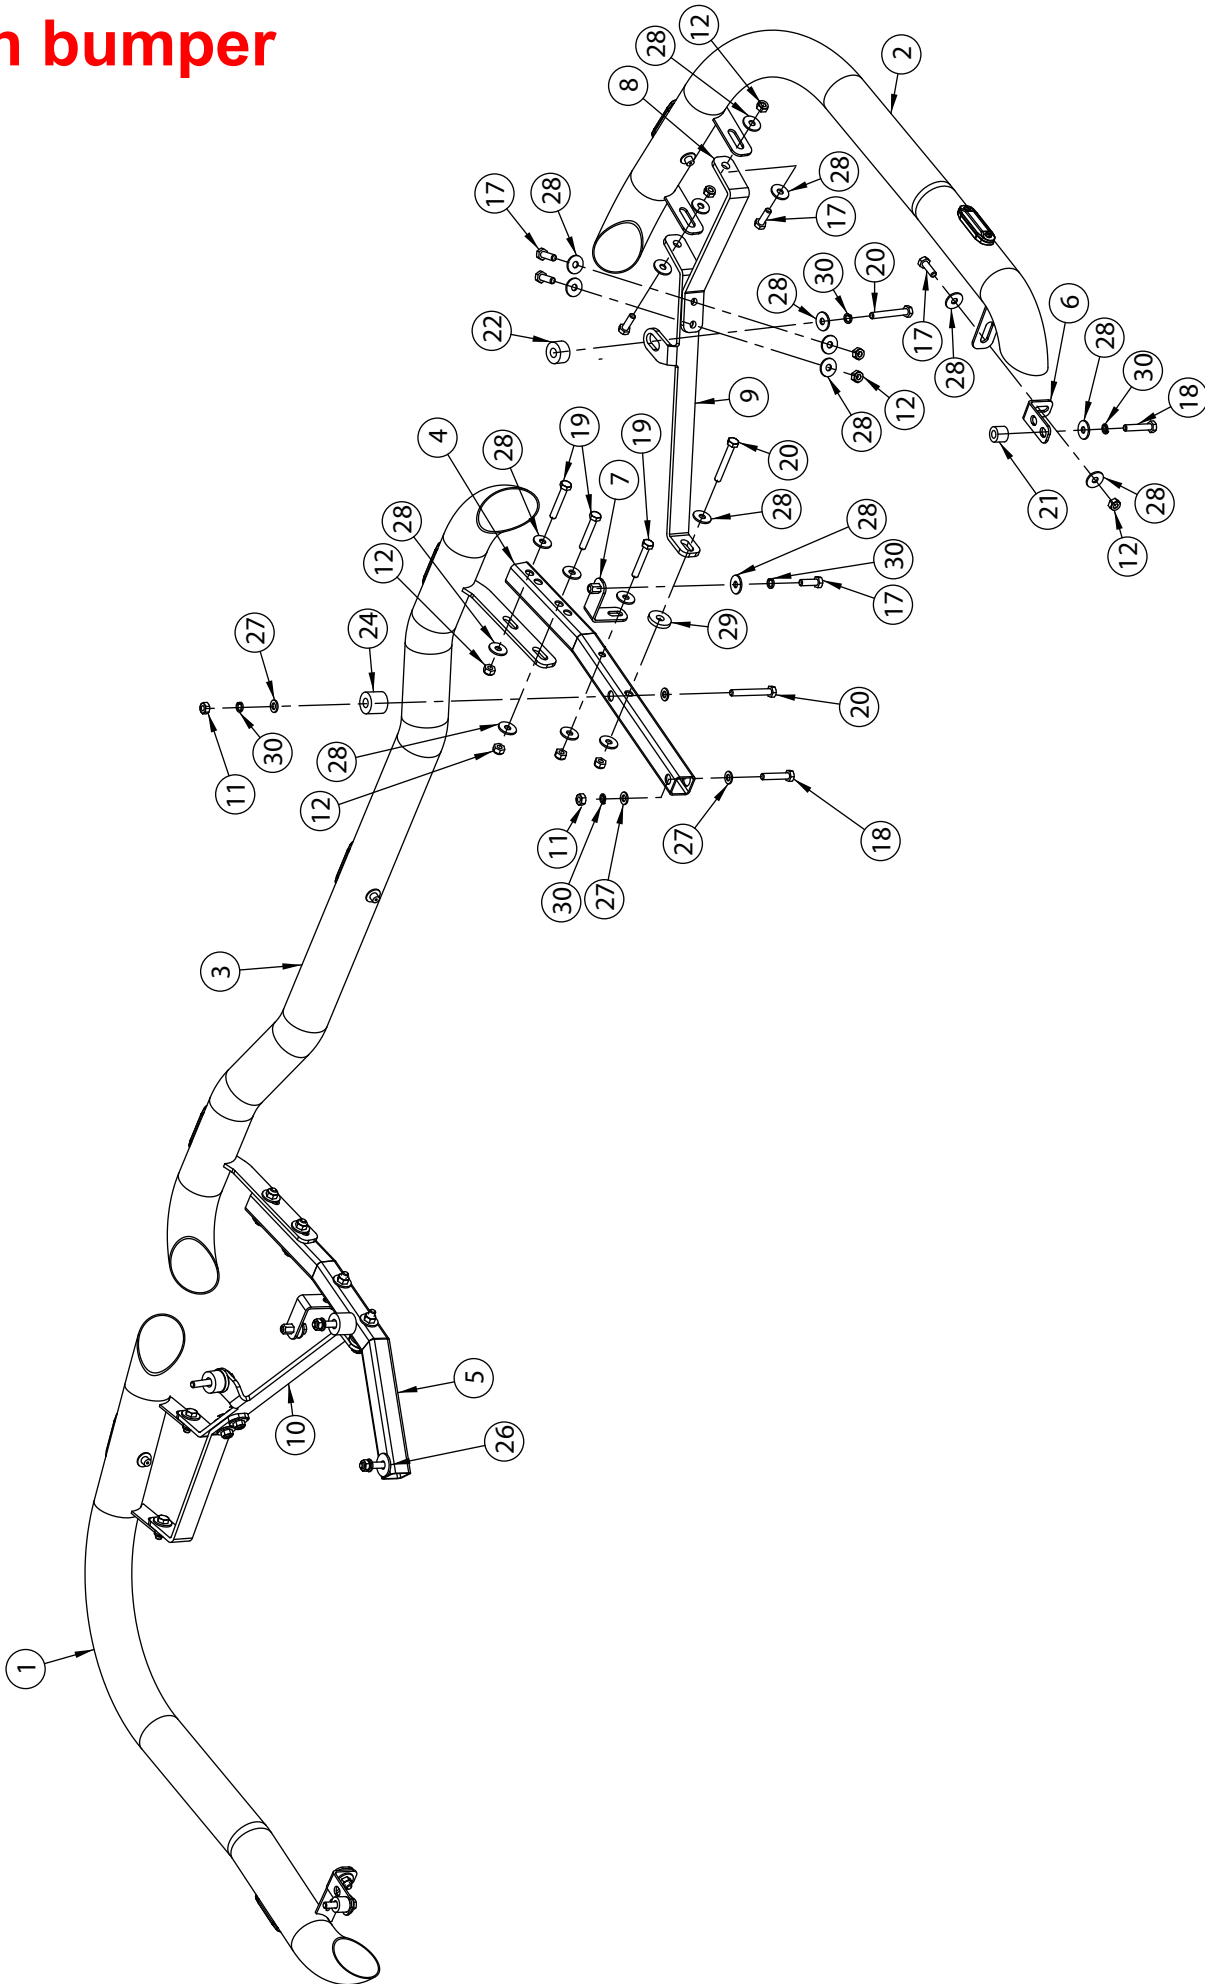

# Scania R 2016-

Esistangekaitse 3-osaline | Cityguard 3 part design | Передняя дуга 3 части дизайна | Cityguard 3-teiliges Design








## High bumper

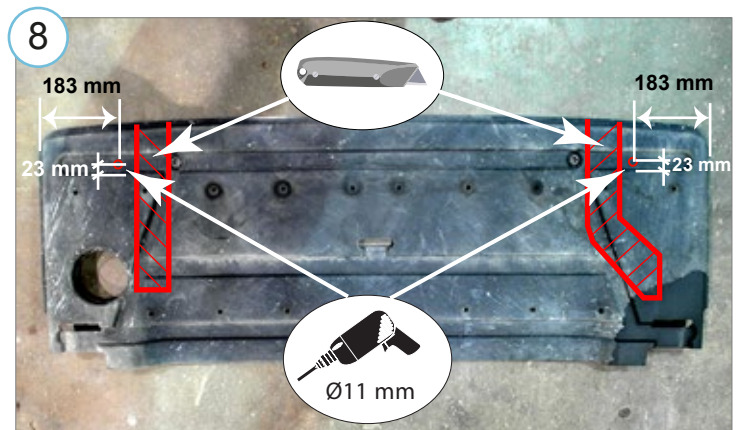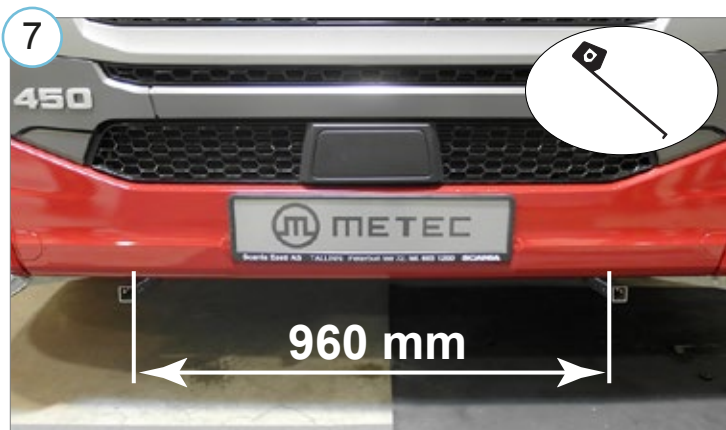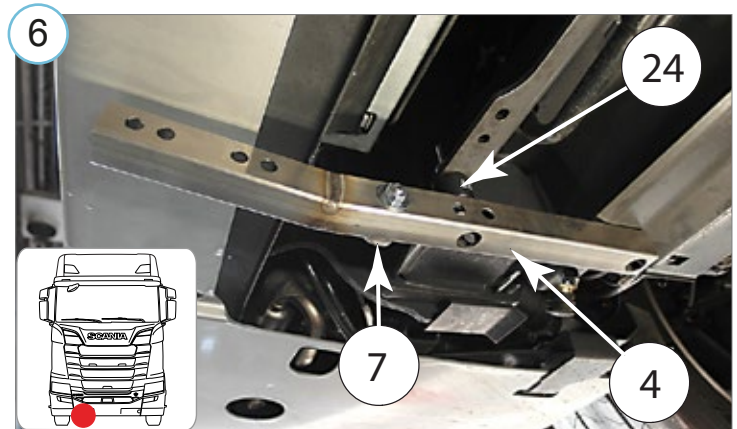
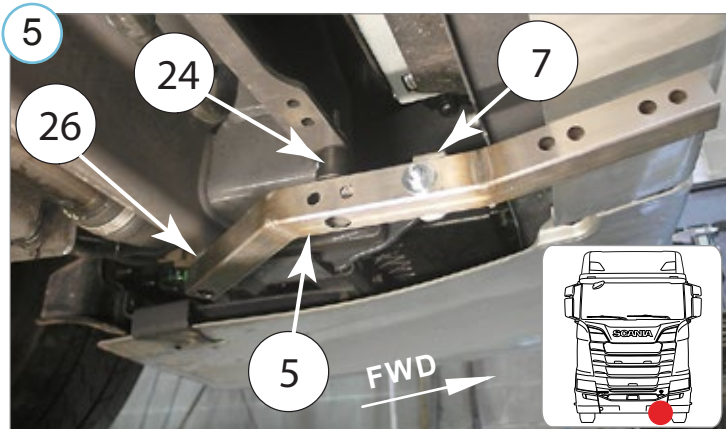
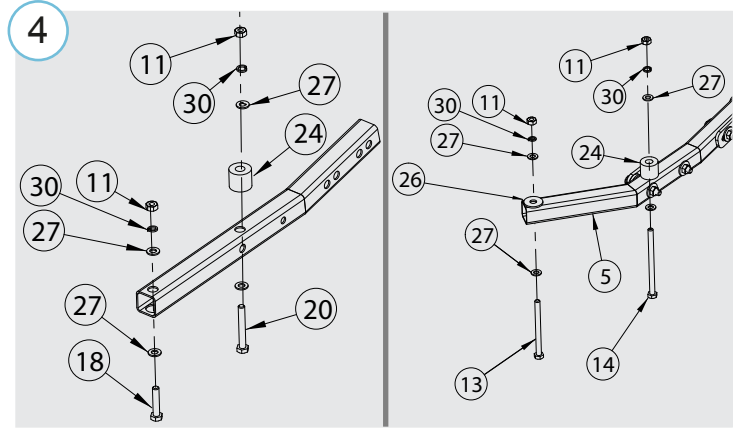
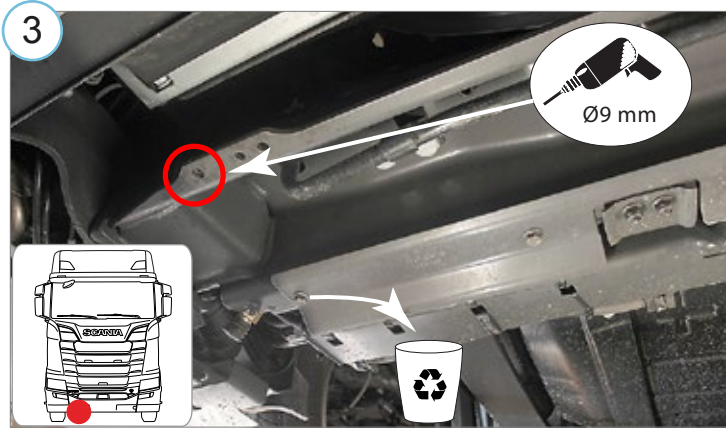
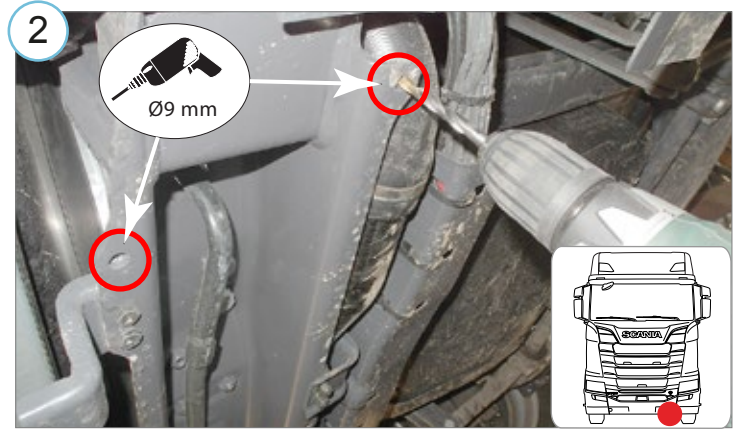
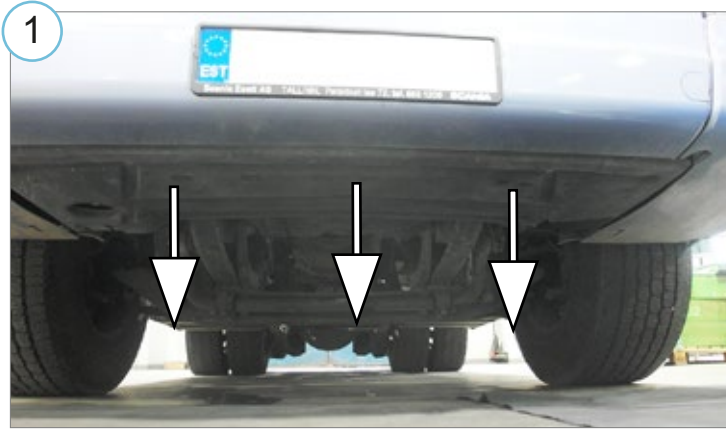


# Scania R 2016-

Esistangekaitse 3-osaline | Cityguard 3 part design | Передняя дуга 3 части дизайна | Cityguard 3-teiliges Design

**High bumper**

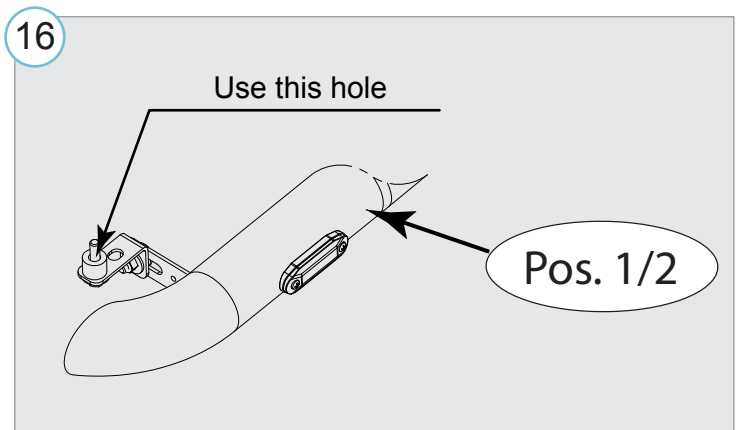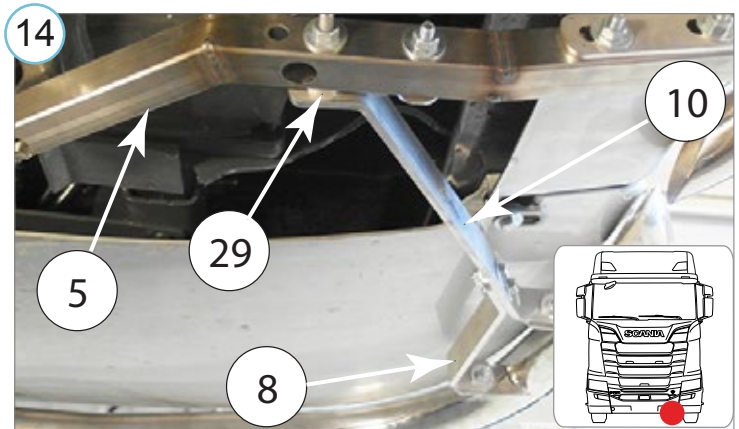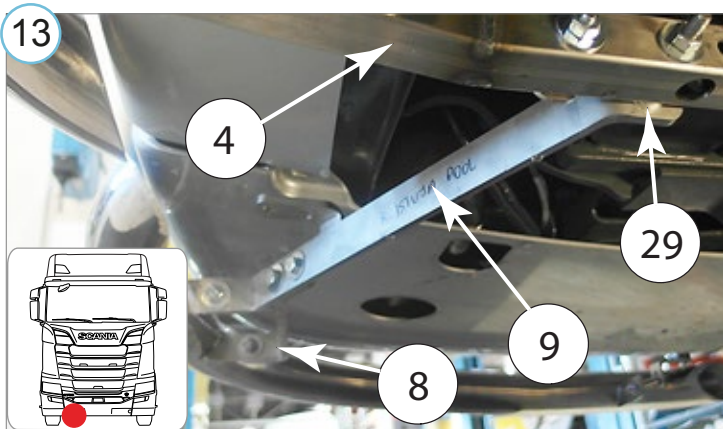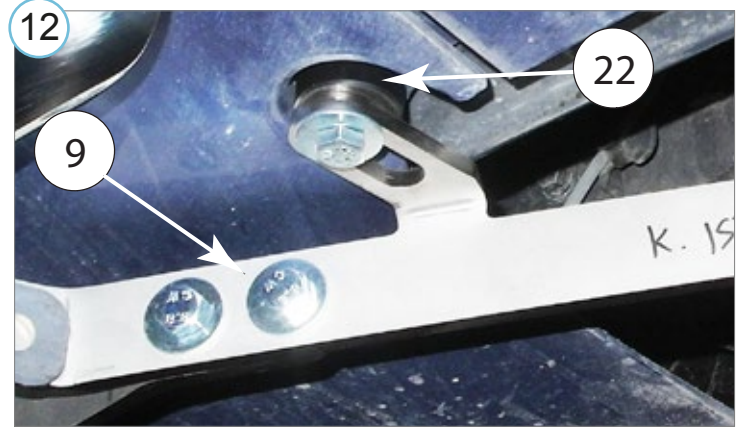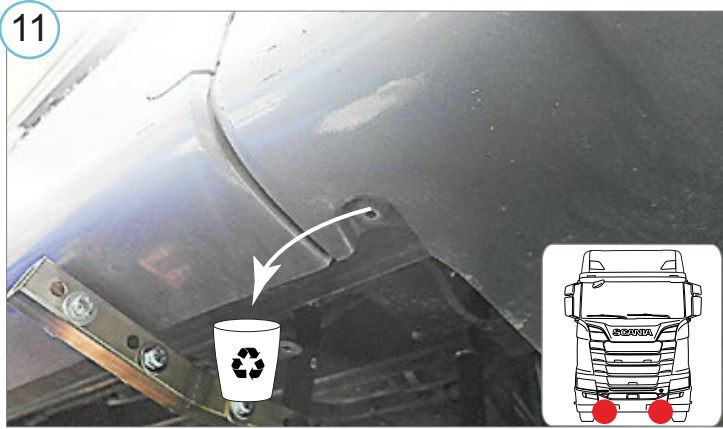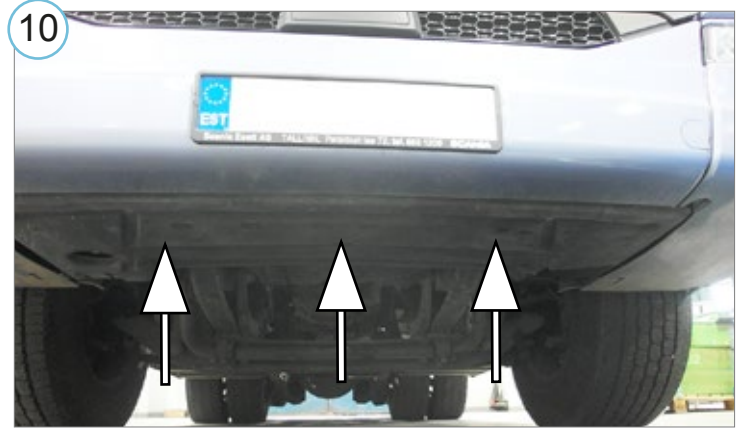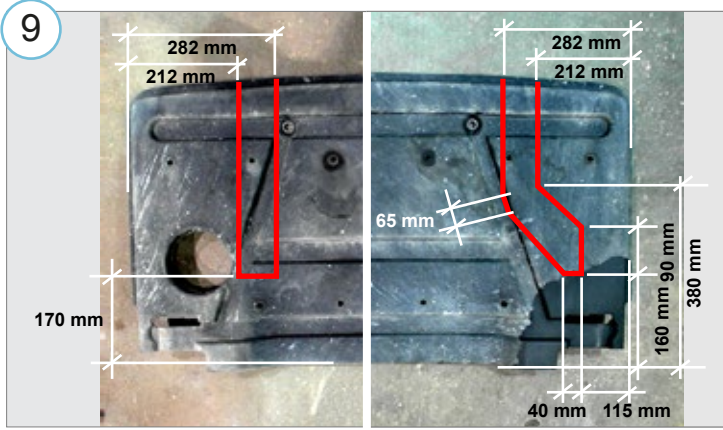

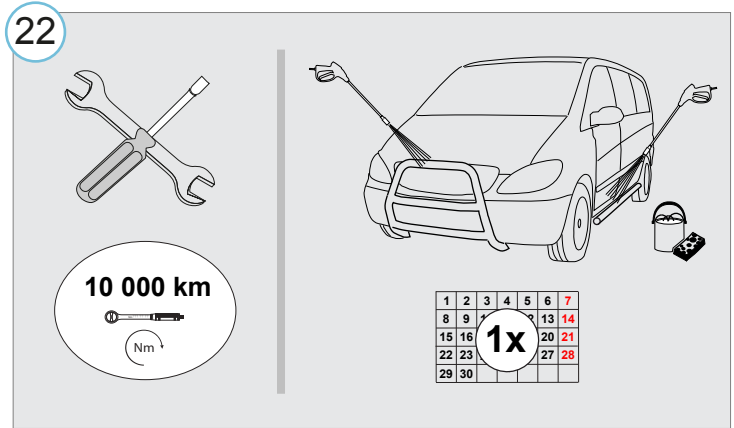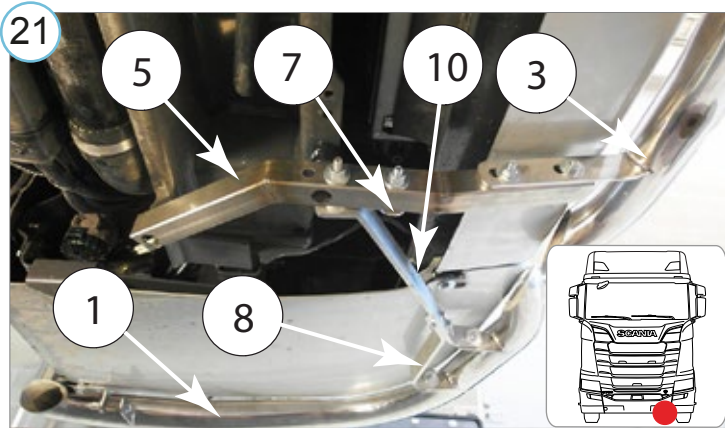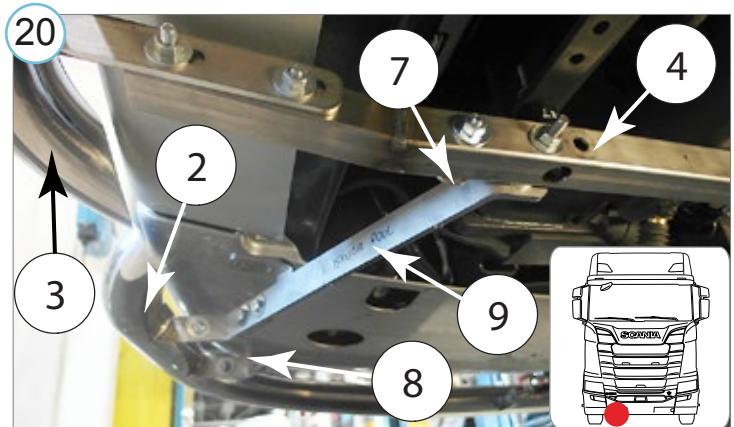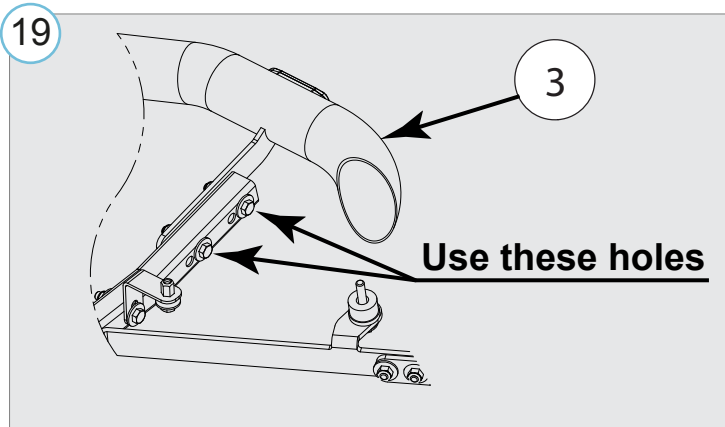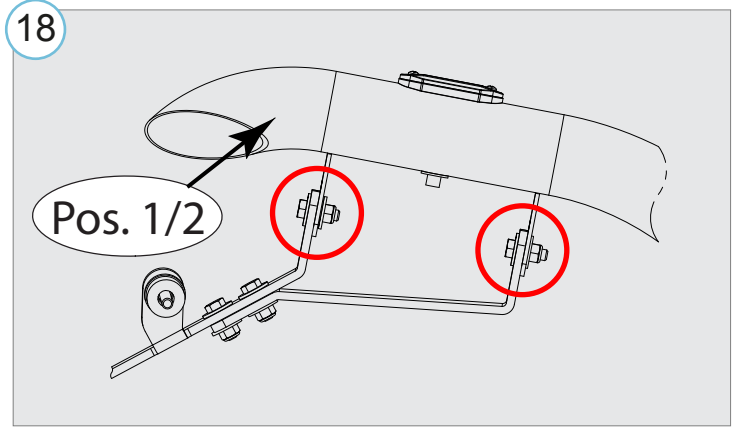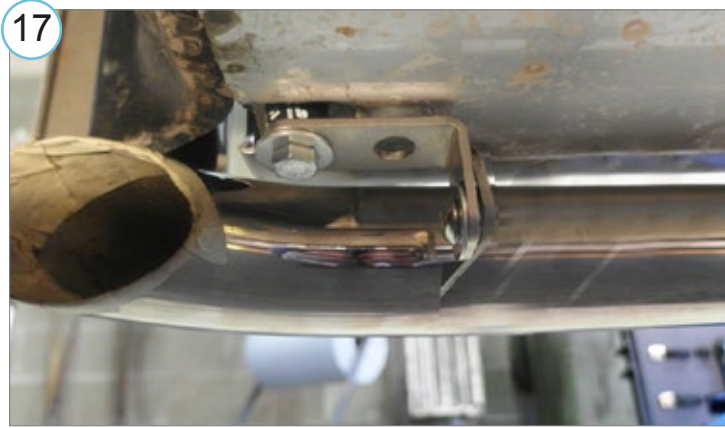

- Kui METEC toode ei vasta Teie ootustele või kui on tegemist toote ebapiisava kvaliteediga, siis pretensioonid esitada lehel [www.metec.ee](http://www.metec.ee)
- If the METEC product does not meet Your expectations or if it is a product of insufficient quality, then you can submit a claim at [www.metec.ee](http://www.metec.ee)
- Если METEC продукт не соответствует Вашим ожиданиям или это продукт недостаточного качества, то претензию предъявить можно на сайте [www.metec.ee](http://www.metec.ee)
- Wenn METEC Produkt nicht Ihren Erwartungen entspricht oder wenn es um Qualitätsmängel geht, dann bitte die Ansprüche auf Seite [www.metec.ee](http://www.metec.ee) einreichen