




BATV390 Volvo FH 2008- Cattle guard MINI 60/76

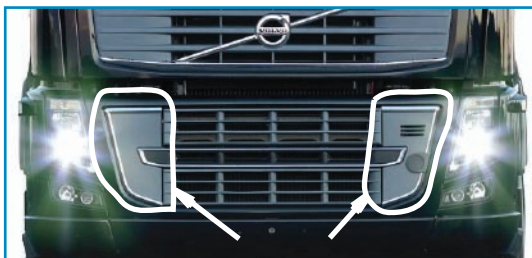

- | | |
|---|---|
| 1. Rammraud / cattle guard / передняя дуга | 1 |
| 2. Kronstein / bracket / кронштейн | 1 |
| 3. Kronstein / bracket / кронштейн | 1 |
| 4. Adapter / adapter / адаптер M10/M14 | 2 |
| 5. Polt / bolt / болт M10x30 mm | 4 |
| 6. Polt / bolt / болт M12x110 mm | 2 |
| 7. Mutter / nut / гайка M12 DIN 985 | 2 |
| 8. Seib / washer / шайба 10,5x30x2,5 mm | 4 |
| 9. Seib / washer / шайба 13x24x2,5 mm | 4 |
| 10. Seib / washer / шайба 15x28x2,5 mm | 2 |
| 11. Vedruseib / spring washer / пружинная шайба A10 | 4 |
| 12. Vedruseib / spring washer / пружинная шайба A14 | 2 |

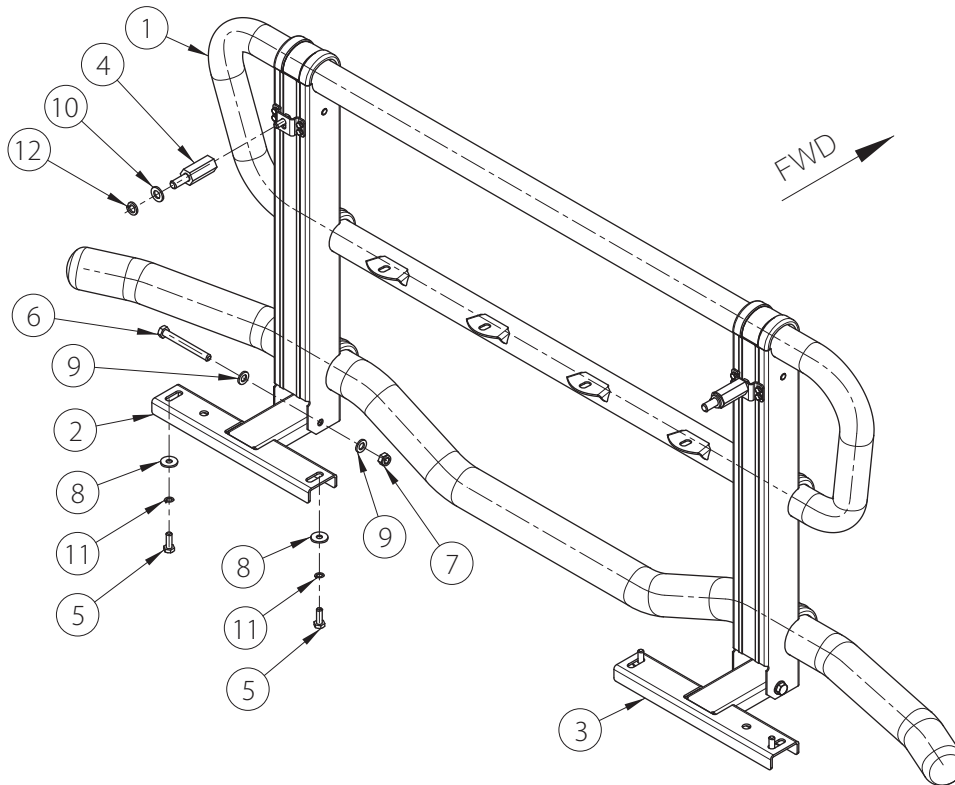

Pilt 1 / Pic. 1 / Рис. 1

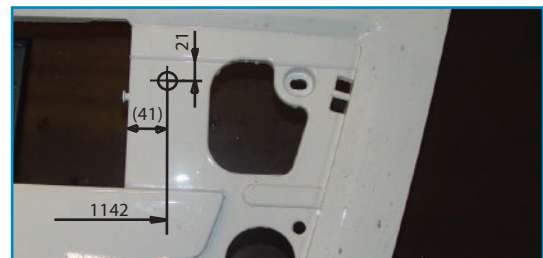

Pilt 2 / Pic. 2 / Рис. 2

ENG • Remove covers (pic. 1). Mark and drill 2 holes $d=32$ mm (pic. 2). Remount the covers. Mark and drill 2 holes $d=32$ mm through the covers. Mount brackets no. 2 and 3. Mount the cattle guard.

- Mõõdud / Measures / Размеры: 190x830x2200 mm.
- Kaal / Weight / Масса: 31,5 kg.
- Paigaldusaeg / Time of mounting / Время установки: 60 min.