


# BATV575

Volvo FH 2013-

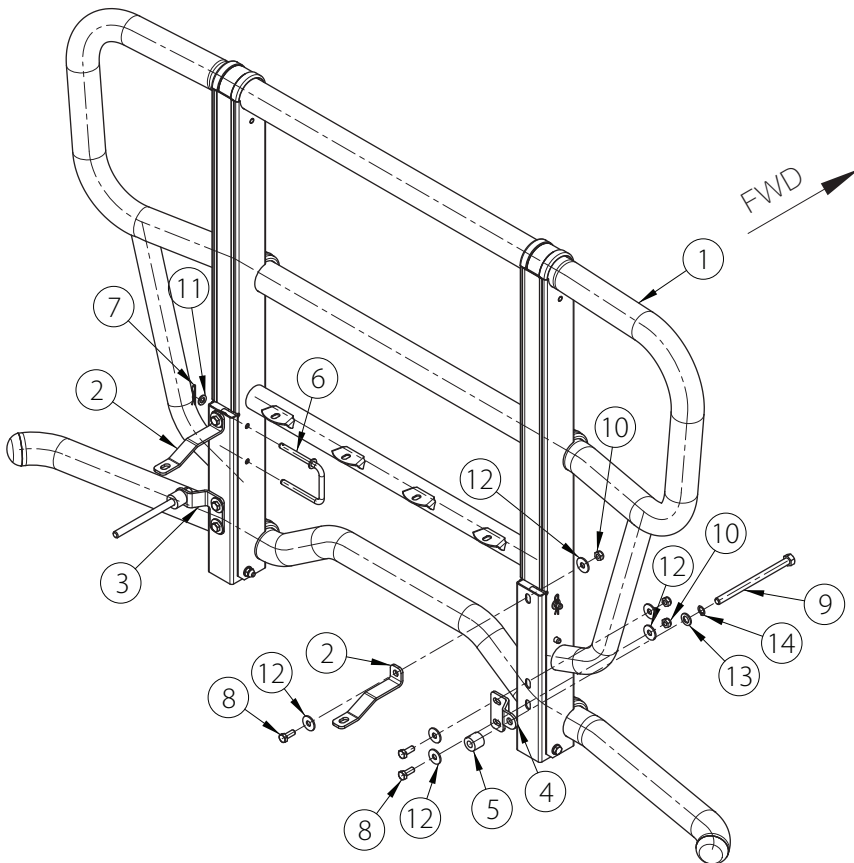

1. Rammraud / cattle guard / передняя дуга	1
2. Kronstein / bracet / кронштейн	2
3. Kronstein / bracet / кронштейн	1
4. Kronstein / bracet / кронштейн	1
5. Puks / bushing / букса	2
6. Heebel / fork pin / штифт	2
7. Vedrusplint / spring cotter / пружинная шплинт	2
8. Polt / bolt / болт M12x30 mm	6
9. Polt / bolt / болт M16x230 mm	2
10. Mutter / nut / гайка M12 DIN 985	6
11. Seib / washer / шайба 13x24x2,5 mm	2
12. Seib / washer / шайба 13x37x3 mm	12
13. Seib / washer / шайба 17x30x3 mm	2
14. Vedruseib / spring washer / пружинная шайба A16	2




- Mõõdud / Measures / Размеры: 220x1410x2330 mm.
- Kaal / Weight / Масса: 58 kg.
- Paigaldusaeg / Time of mounting / Время установки: 60 min.



Pilt 1 / Pic. 1 / Рис. 1




Pilt 2 / Pic. 2 / Рис. 2

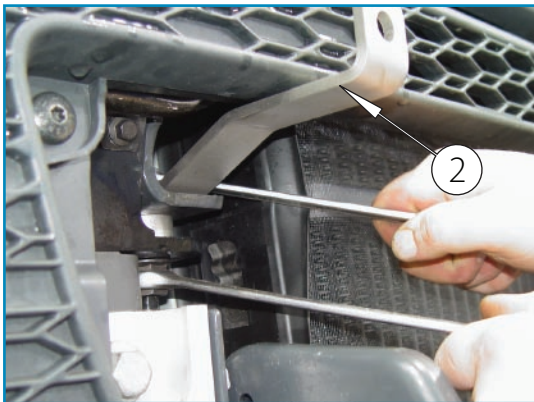


Pilt 3 / Pic. 3 / Рис. 3




Pilt 4 / Pic. 4 / Рис. 4

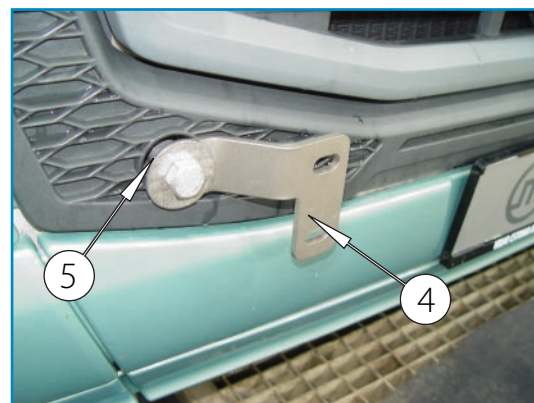


Pilt 5 / Pic. 5 / Рис. 5

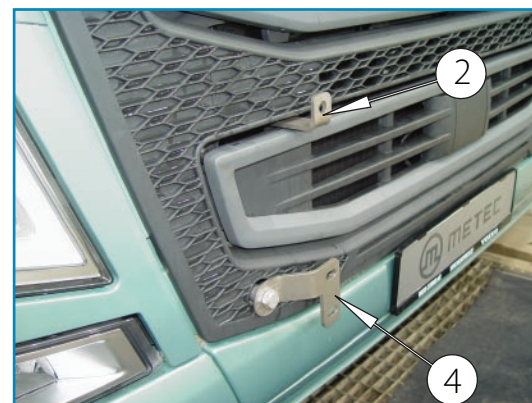


Pilt 6 / Pic. 6 / Рис. 6

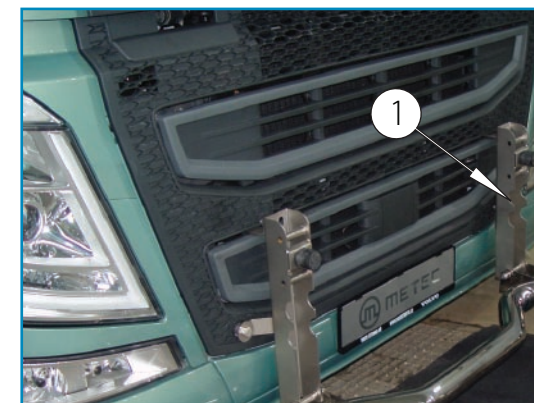


Pilt 7 / Pic. 7 / Рис. 7

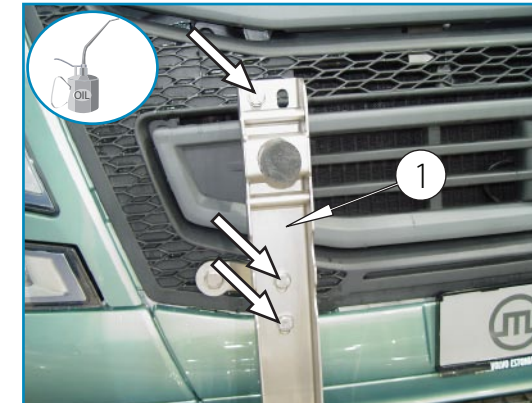

Pilt 8 / Pic. 8 / Рис. 8

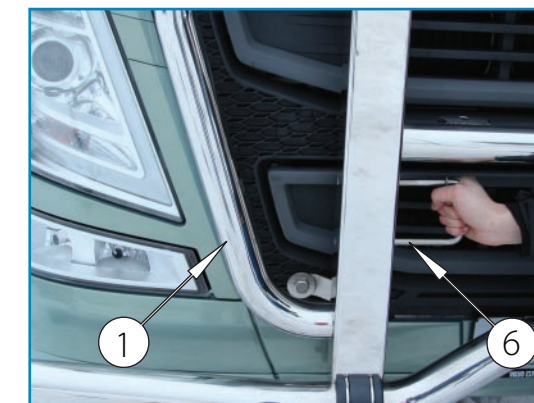

Pilt 9 / Pic. 9 / Рис. 9

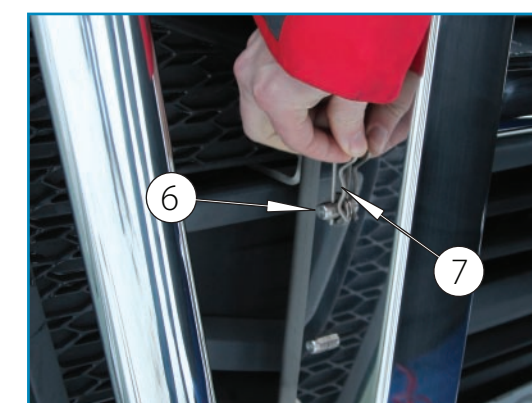

Pilt 10 / Pic. 10 / Рис. 10