


ZF.00BAT-M310 MAN TG-L

1. Laternakandur / lampholder	1
2. Puks / bushing	2
3. Polt / bolt M8x45 mm	2
4. Polt / bolt M8x80 mm	2
5. Seib / washer 8,4x24x2 mm	4
6. Vedruseib / spring washer A8	4

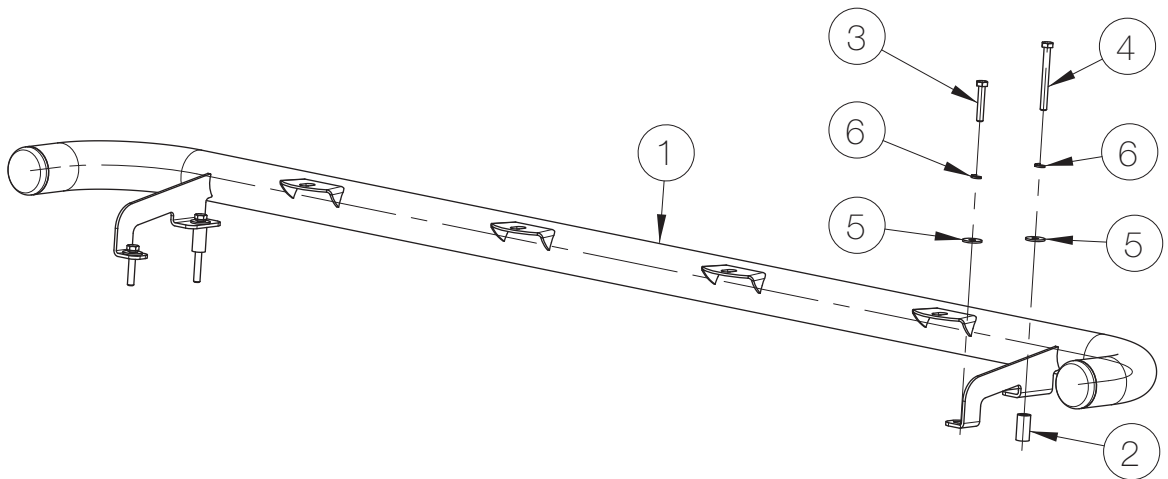

Required Tools



Instructions

- Mount the lampholder to the original sunscreen mountings.