



Montaažiskeem / Mounting Instructions / Монтажная схема


ISUZU D-Max 2012-

Art. 813110


Astmelaud Ø 76

Sideboard step Ø 76

Пороги Ø 76

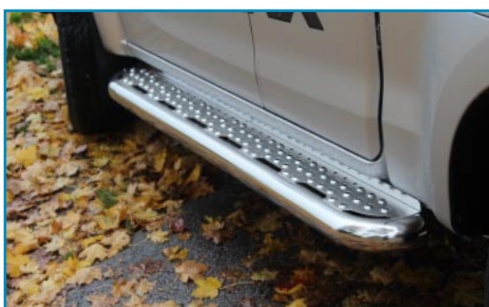

1. Astmelaud / sideboard step / пороги	1+1
2. Kronstein / bracket / кронштейн	2+2
3. Kronstein / bracket / кронштейн	1+1
4. Polt / bolt / болт M8x20 mm	6
5. Polt / bolt / болт M10x30 mm Wüllock	12
6. Mutter / nut / гайка M 8 DIN 985	6
7. Mutter / nut / гайка M10 DIN 985	12
8. Seib / washer / шайба 8,4x14x2 mm	12
9. Seib / washer / шайба 10,5x30x2,5 mm	12
10. Vedruseib / spring washer / пружинная шайба A8	6

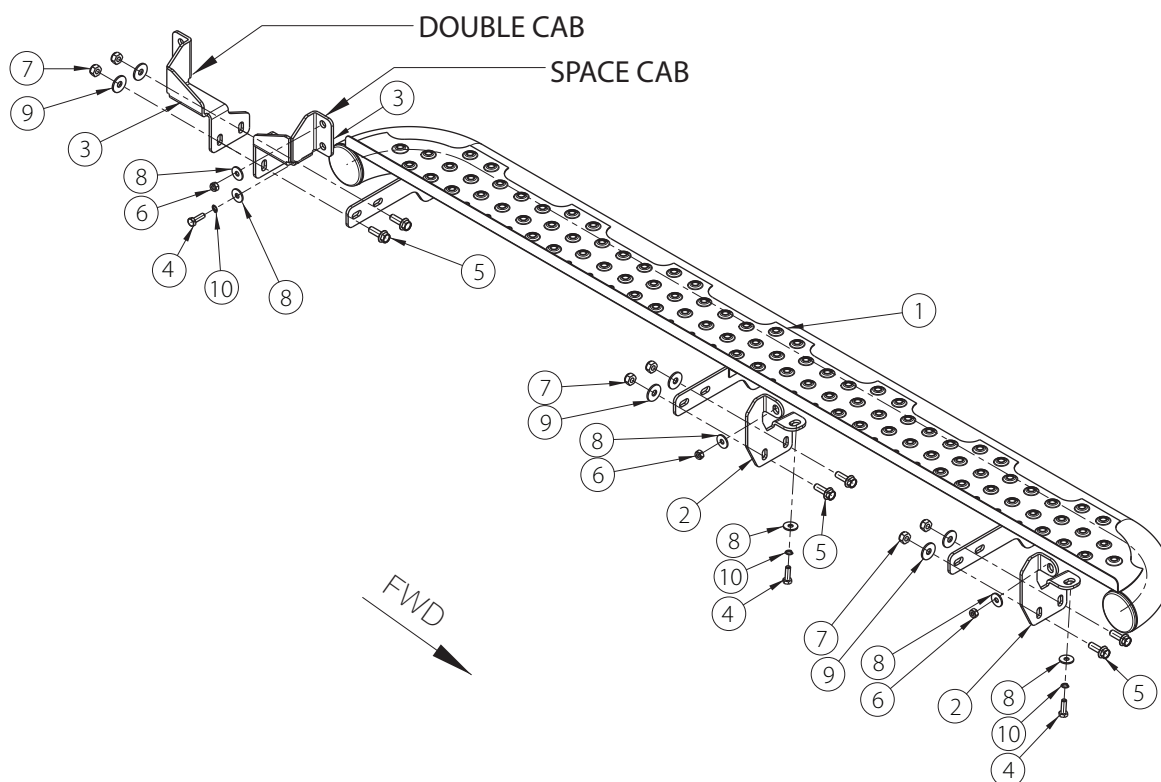

Vajalikud tööriistad / Required Tools / Необходимые инструменты



# Montaažiskeem / Mounting Instructions / Монтажная схема

ISUZU D-Max 2012-

Art. 813110

Astmelaud Ø 76


Sideboard step Ø 76

Пороги Ø 76


## Paigaldamine / Instructions / Инструкция установки




Pilt 1 / Pic. 1 / Рис. 1

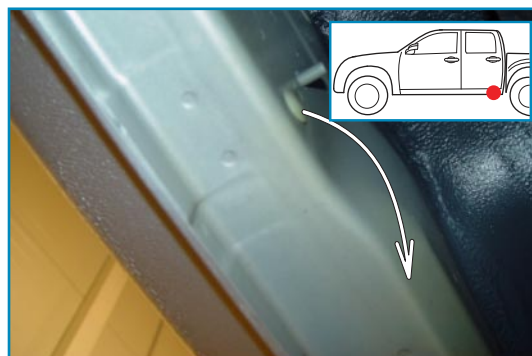

Pilt 2 / Pic. 2 / Рис. 2

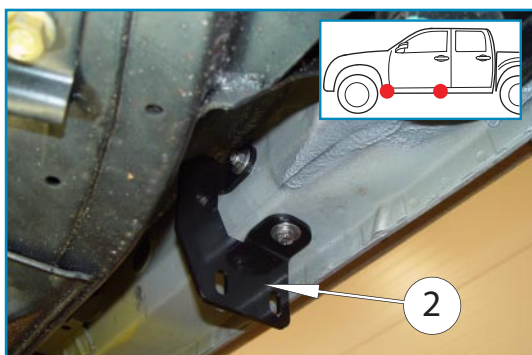

Pilt 3 / Pic. 3 / Рис. 3

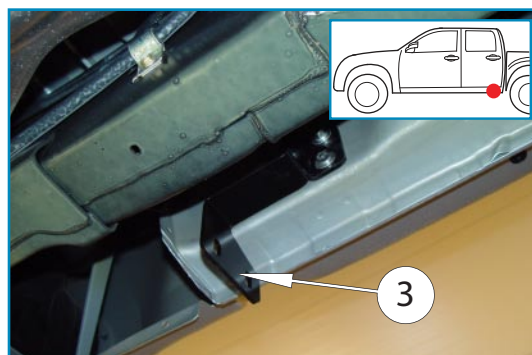

Pilt 4 / Pic. 4 / Рис. 4

## Toote andmed / Data of the product / Данные о товаре

- Mõõdud / Measures / Размеры: 200x300x1900 mm.
- Kaal / Weight / Масса: 27 Kg.
- Paigaldusaeg / Time of mounting / Время установки: 60 min.
- Tähtsad markeeringud / Important labels / Важные этикетки:



1. Komplekteerija number. / The number of the assembler / Номер комплектовщика
2. Tooteinfo pakendil / Product information on the package / Информация на упаковке
3. Tooteinfo tootel / Product information on the product / Информация на товаре
4. Kvaliteedi kontrolli tähis / Quality control number / Знак контроля качества