



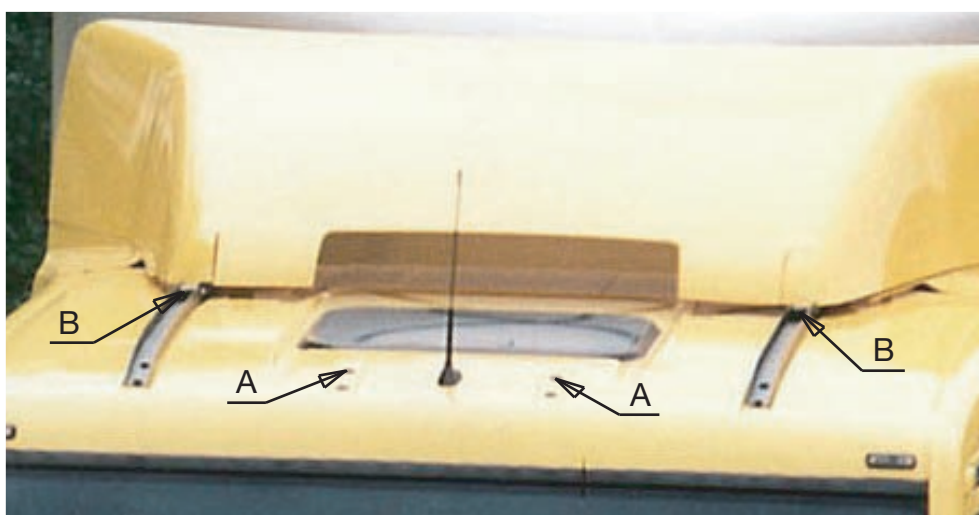

- | | |
|--------------------------------------|---|
| 1. Laternakandur / lampholder | 1 |
| 2. Kronstein / bracket | 2 |
| 3. Kompensaator / rubber plate | 2 |
| 4. Kompensaator / rubber plate | 2 |
| 5. Polt / bolt M8x25 mm | 6 |
| 6. Polt / bolt M10x25 mm | 2 |
| 7. Mutter / nut M8 DIN 985 | 4 |
| 8. Seib / washer 8,4x16x1,6 mm | 6 |
| 9. Seib / washer 8,4x24x2 mm | 4 |
| 10. Seib / washer 10,5x20x2 mm | 2 |
| 11. Vedruseib / spring washer A8 | 4 |
| 12. Vedruseib / spring washer A10 | 2 |
| 13. Polt / bolt M8x80 mm | 2 |
| 14. Tõmbemutter / blind rivet nut M8 | 4 |

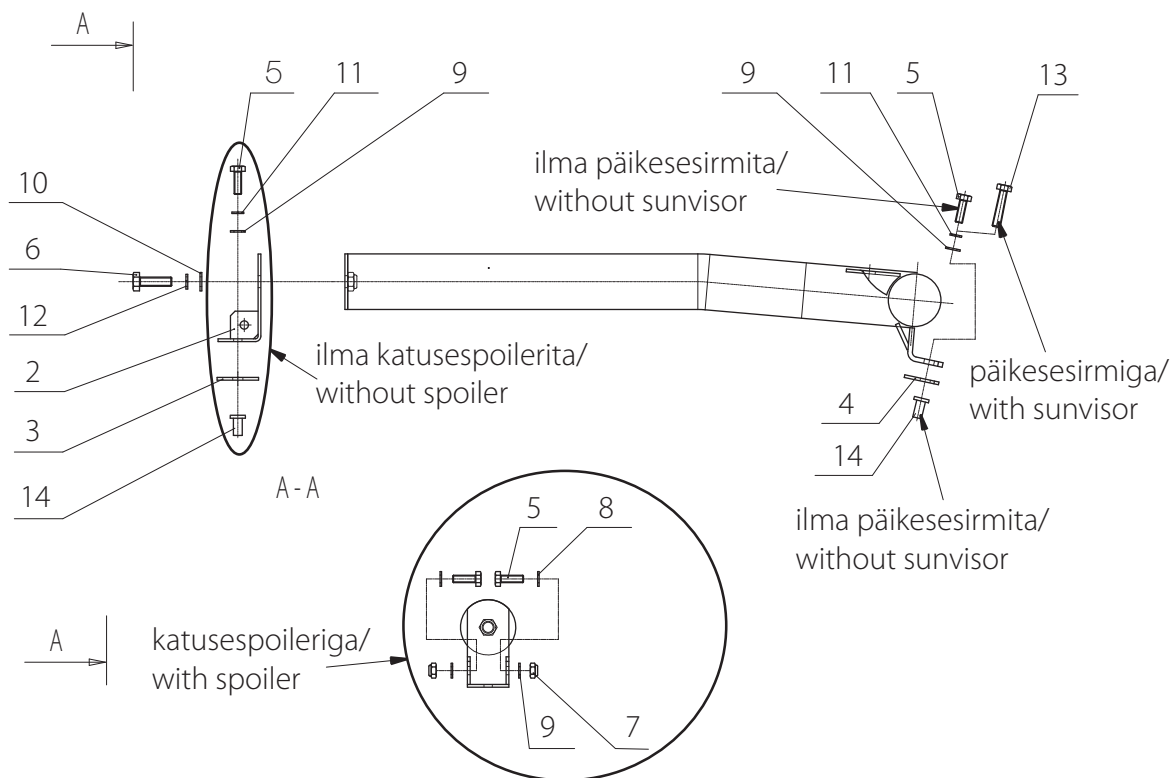

Pilt 1 / Pic 1

- The lampholder should be mounted to the original mounting points. The front mounting goes to the sunscreen mounting points A (pic. 1), and the rear mounting goes to the roofspoiler's mounting points B (pic. 1).
- If the truck doesn't have either the sunvisor or the roofspoiler, then the lampholder should be mounted to the place of the original mounting points.