


ZF.00BAT-M230
ZF.00BAT-M231
ZF.00BAT-M235



ZF.00BAT-M236
ZF.00BAT-M237
ZF.00BAT-M238

MAN TG-A XXL Lampholder Ø 60

1. Laternakandur / Lampholder	1	7. Tömbemutter / blind rivet nut M8	6
2. Vinkel / angeled plate	2	8. Seib / washer 8,4x24x2 mm	6
3. Kompensaator / rubber plate	2	9. Seib / washer 10,5x20x2 mm	2
4. Kompensaator / rubber plate	2	10. Vedruseib / spring washer A8	6
5. Polt / bolt M8x30 mm	6	11. Vedruseib / spring washer A10	2
6. Polt / bolt M10x25 mm	2		

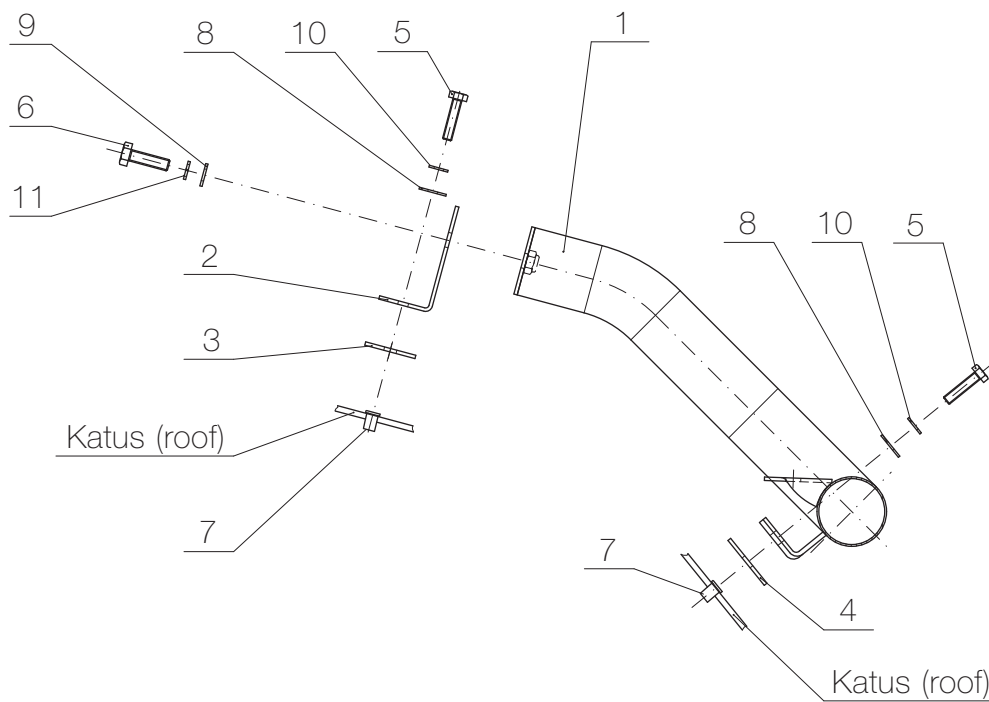

- Attach the angled plates no. 2 to the lampholder.
- Place the lampholder to the middle of the roof and mark 6 holes through the angled plates.
- Drill 6 holes d=13 mm through the roof.
- Fill the drilled holes with silicone.
- Mount the blind rivet nuts M8.
- Mount the lampholder.

- Measures: 100x400x1600 mm.
- Weight: 6,5 kg + cables 3,2 kg
- Time of mounting: 30 min.